


HS-001 right Installation instructions

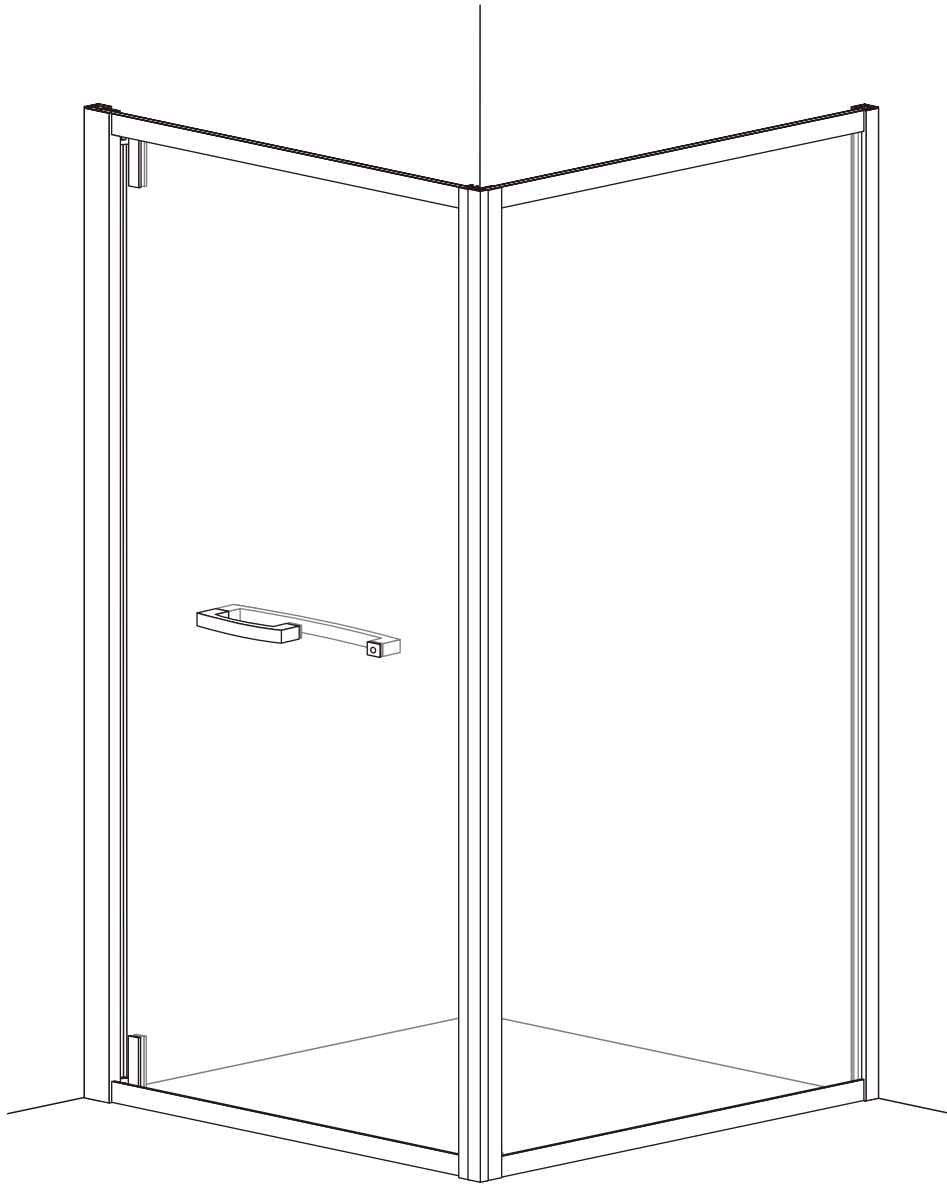


**SIZE:80X80X200CM
90X90X200CM**

Installation instructions


TOOLS REQUIRED(NOT SUPPLIED)

when you're ready to start. make sure that you have the following tools to hand, plenty of space and a clean dry area for assembly.


Two people are needed. Please note: Although these instructions are comprehensive, We always recommend that a technically competent installer should undertake installation.

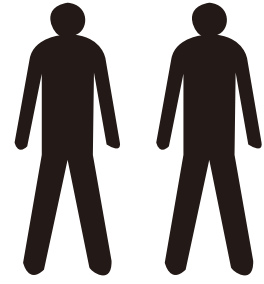


Drill bit to suit wall type
6mm

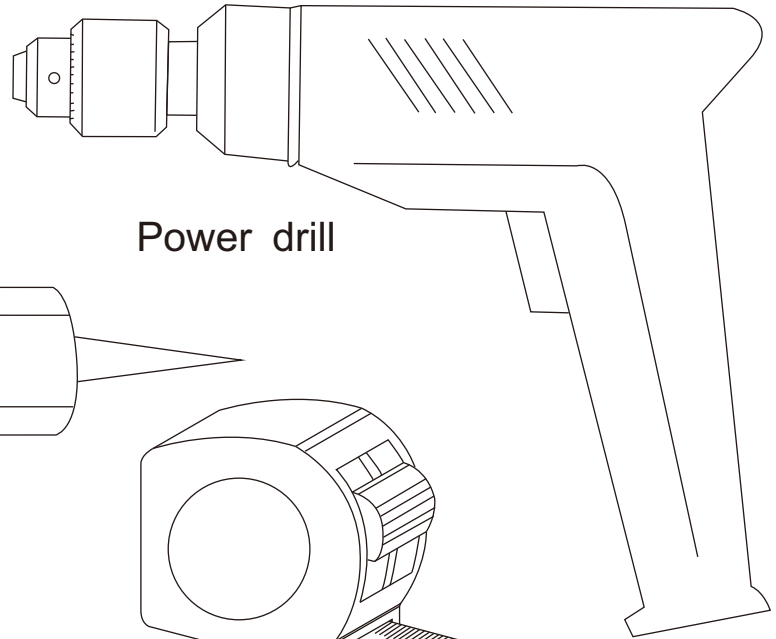


Power drill

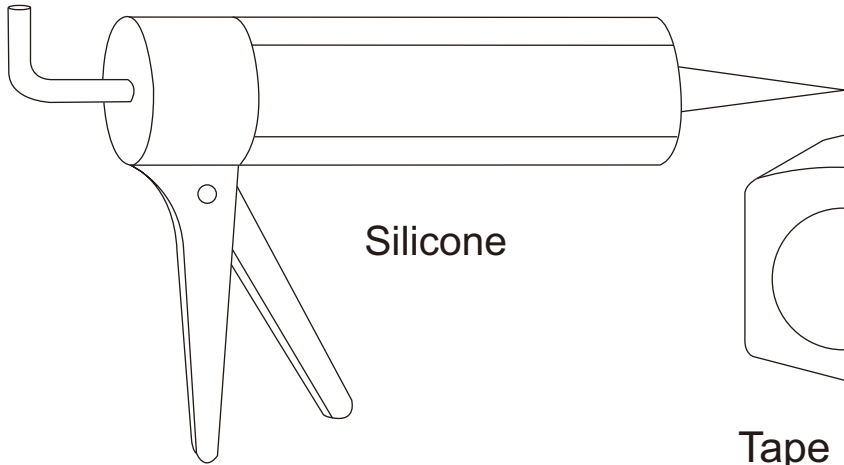


Silicone

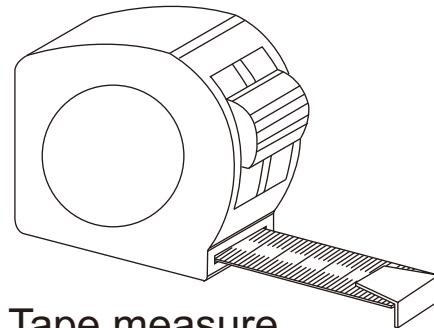


Tape measure

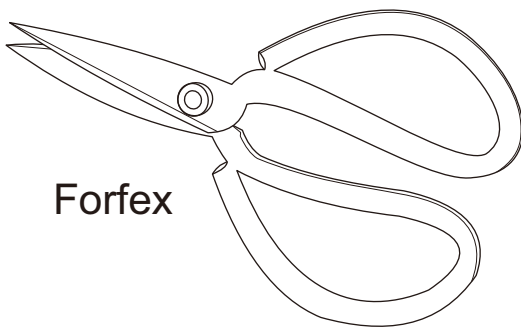


Forfex

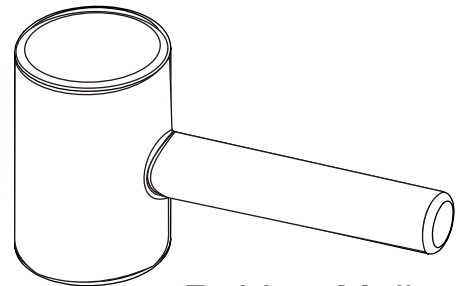


Rubber Mallet



Pencil
















Magnetic cross head screw driver




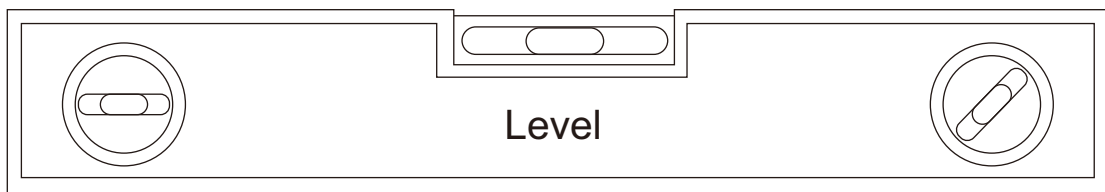


Level







Installation instructions

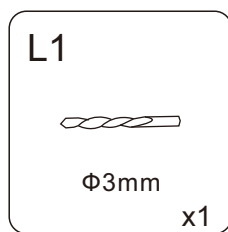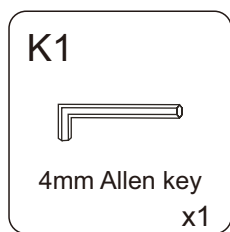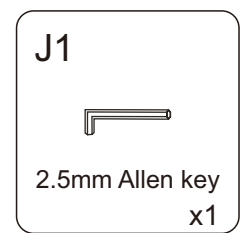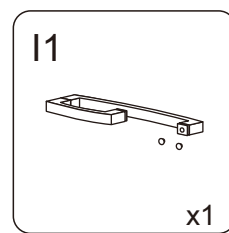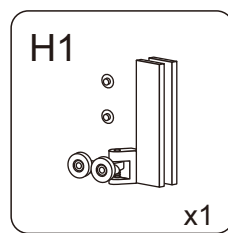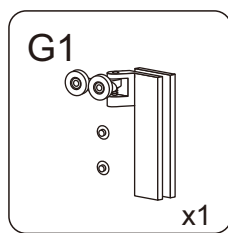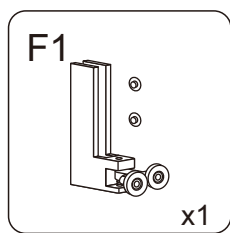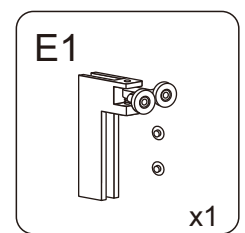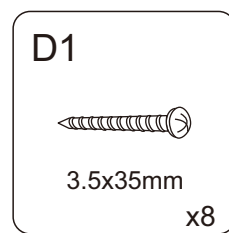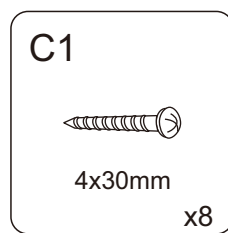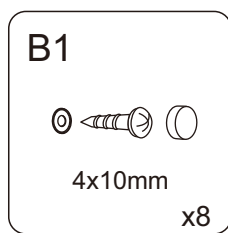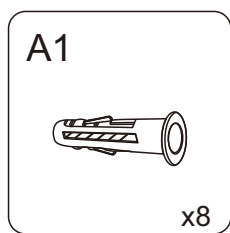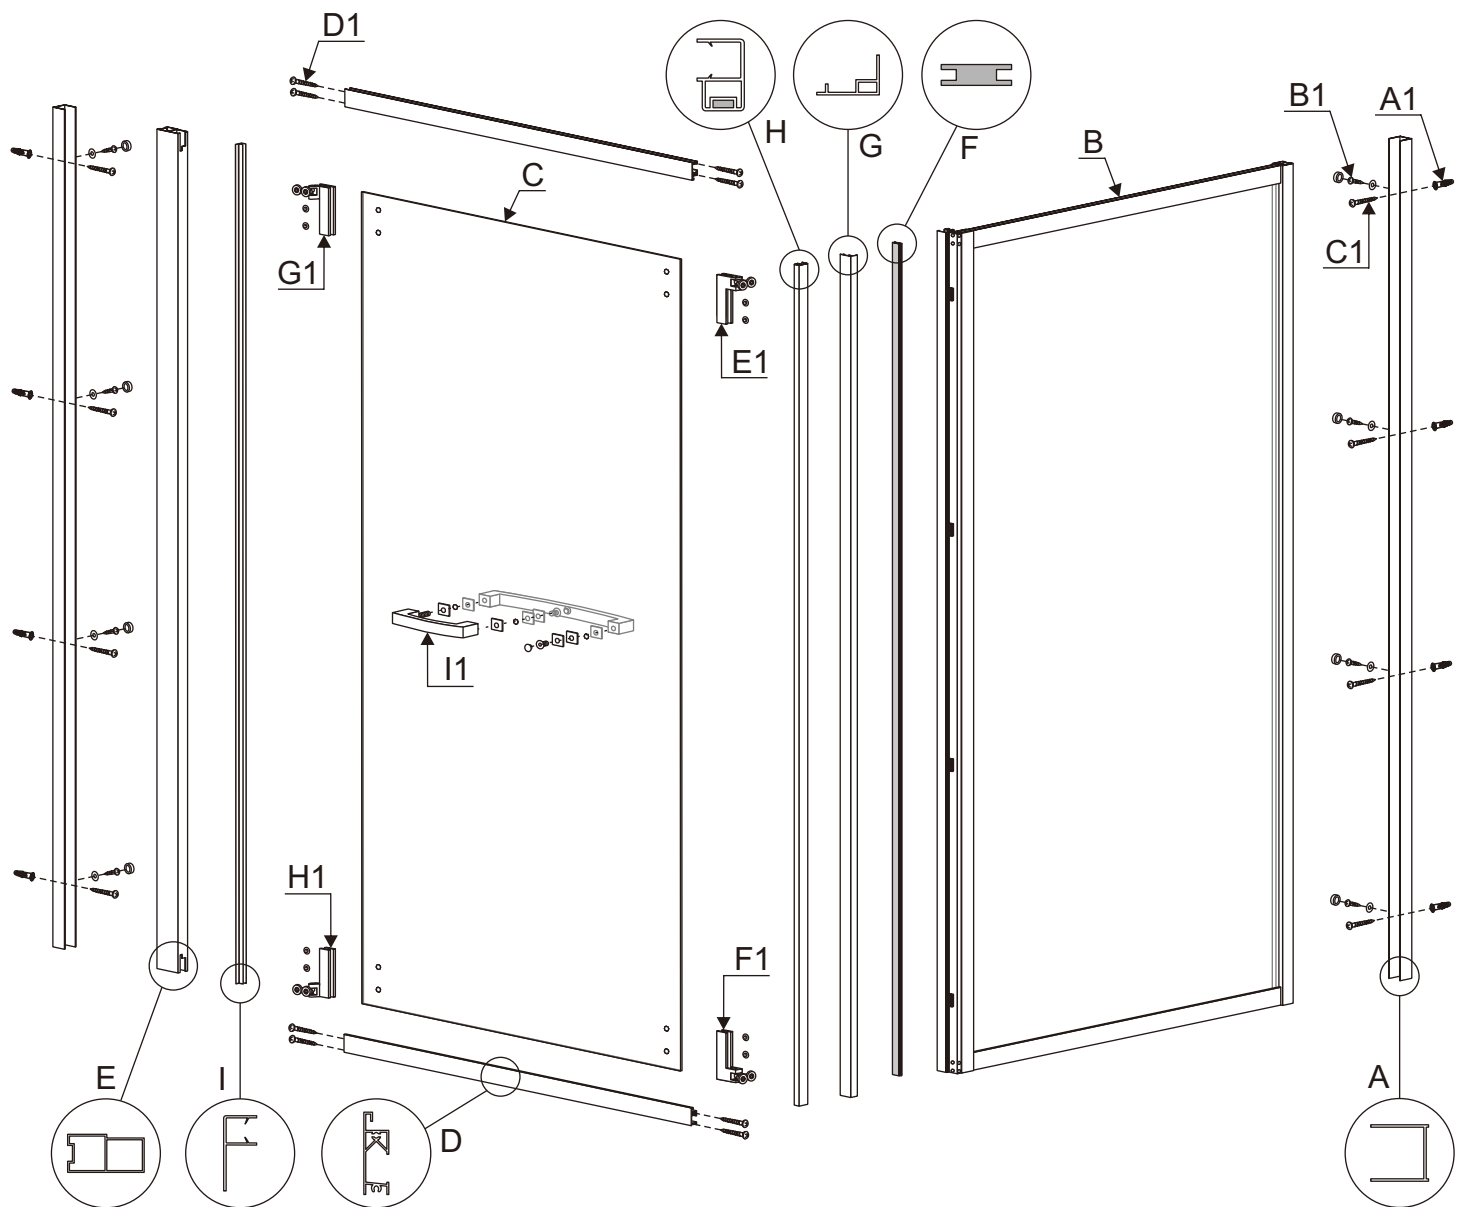











Installation instructions

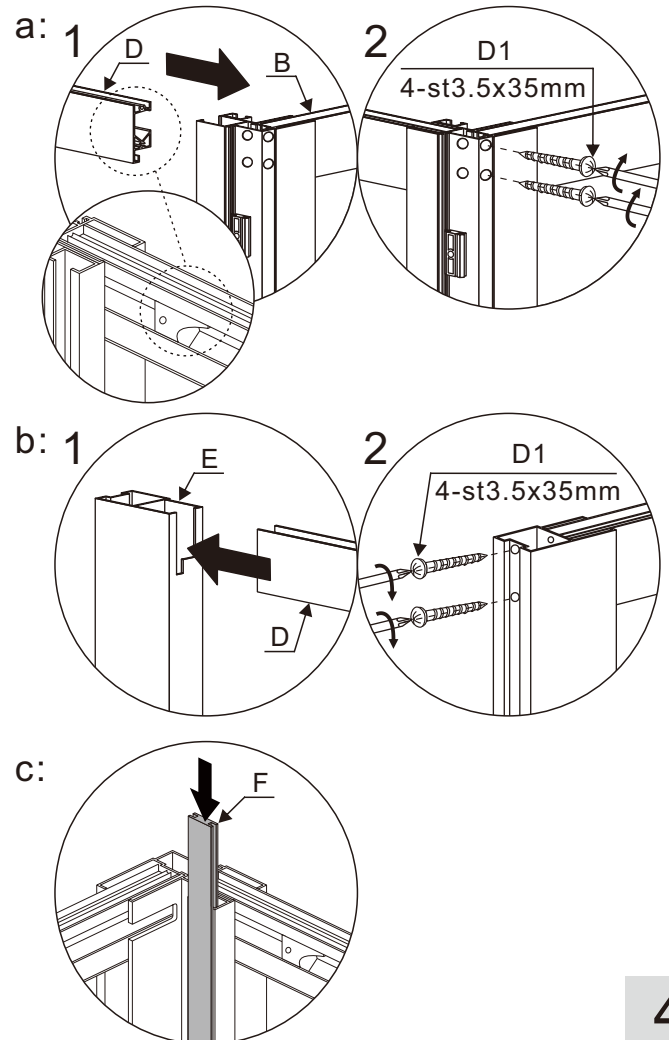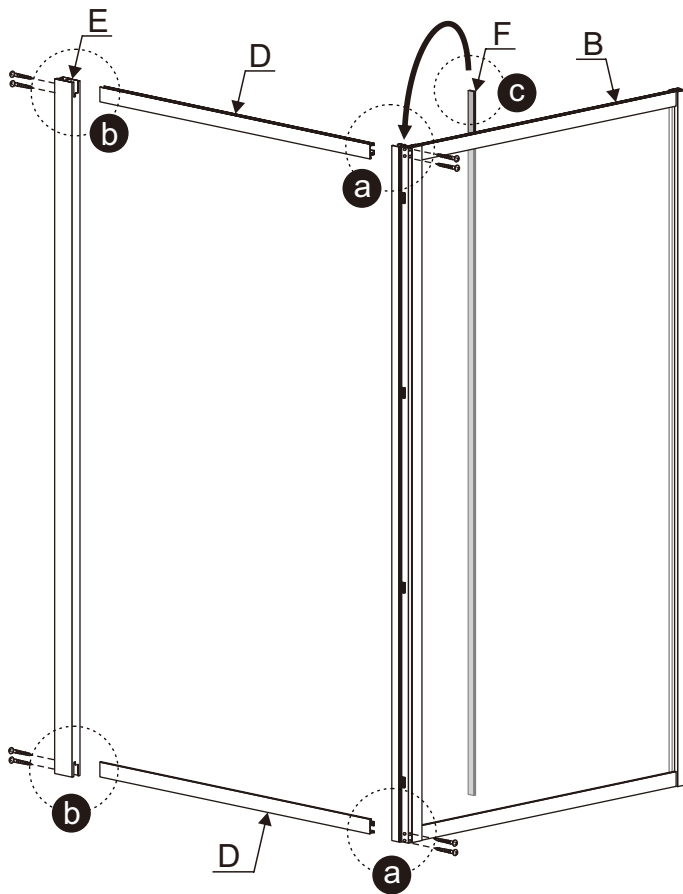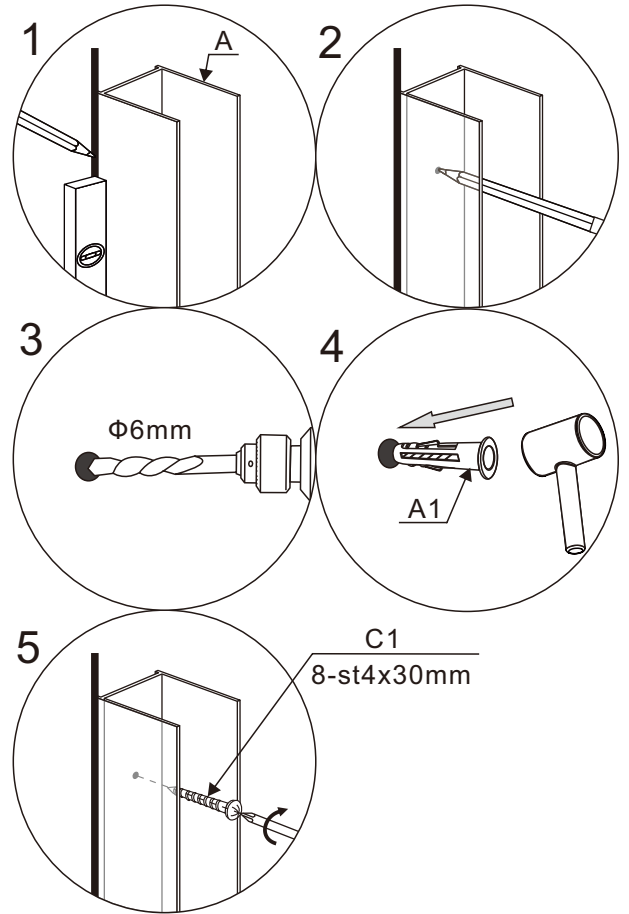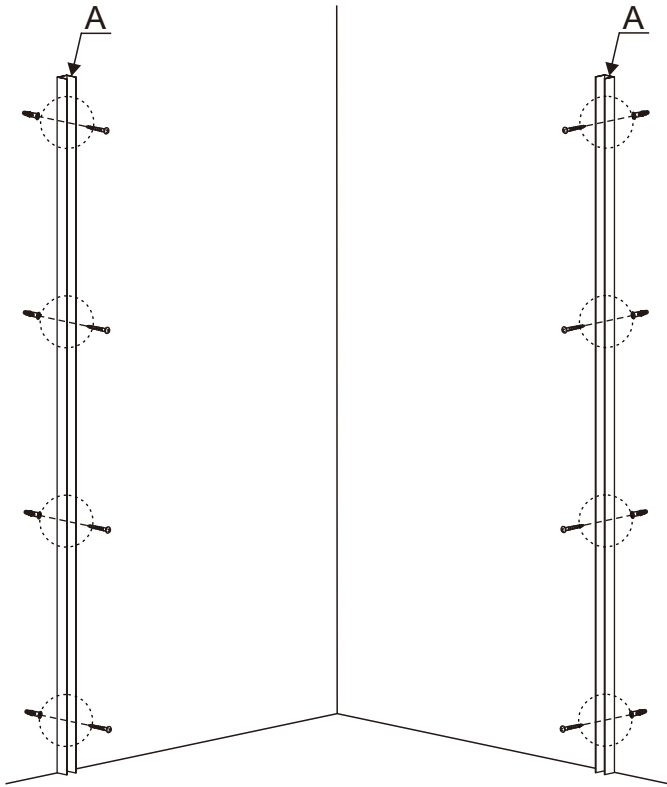






Installation instructions

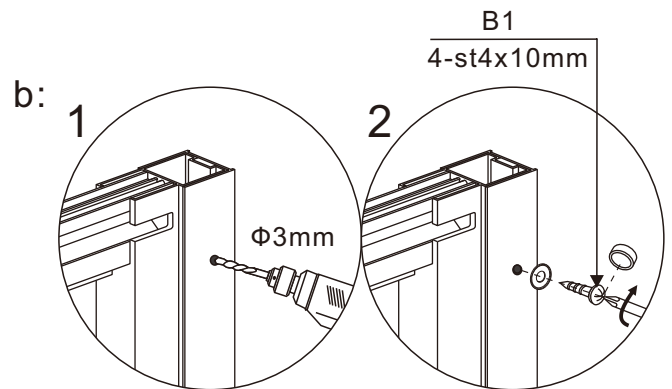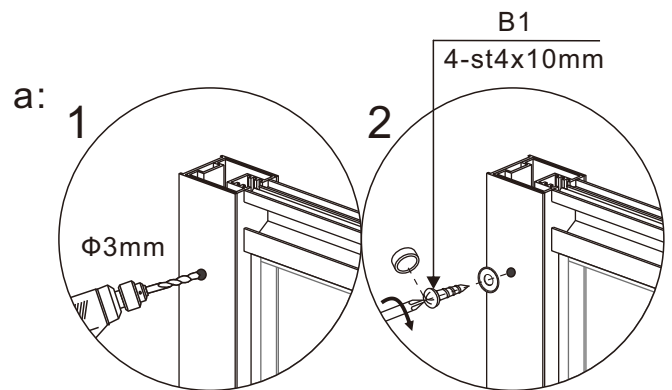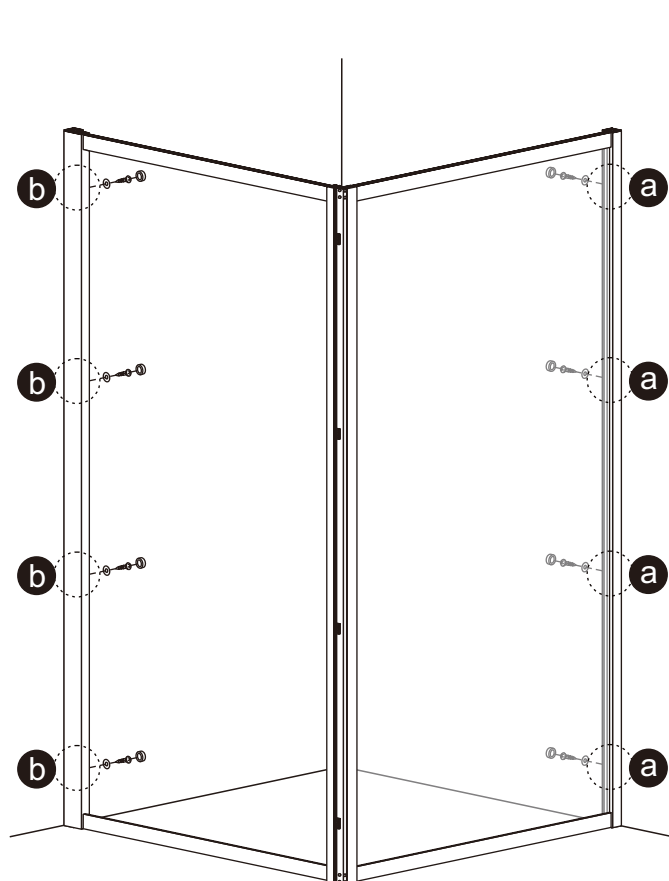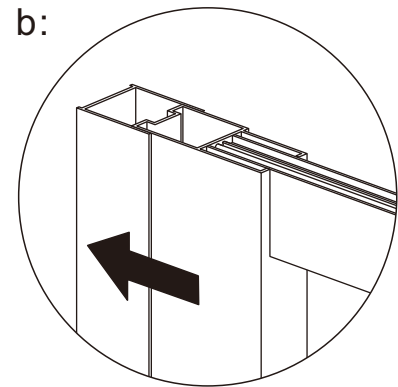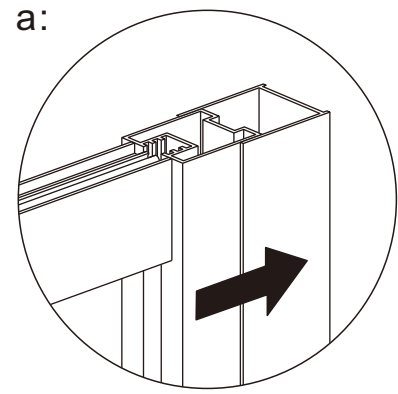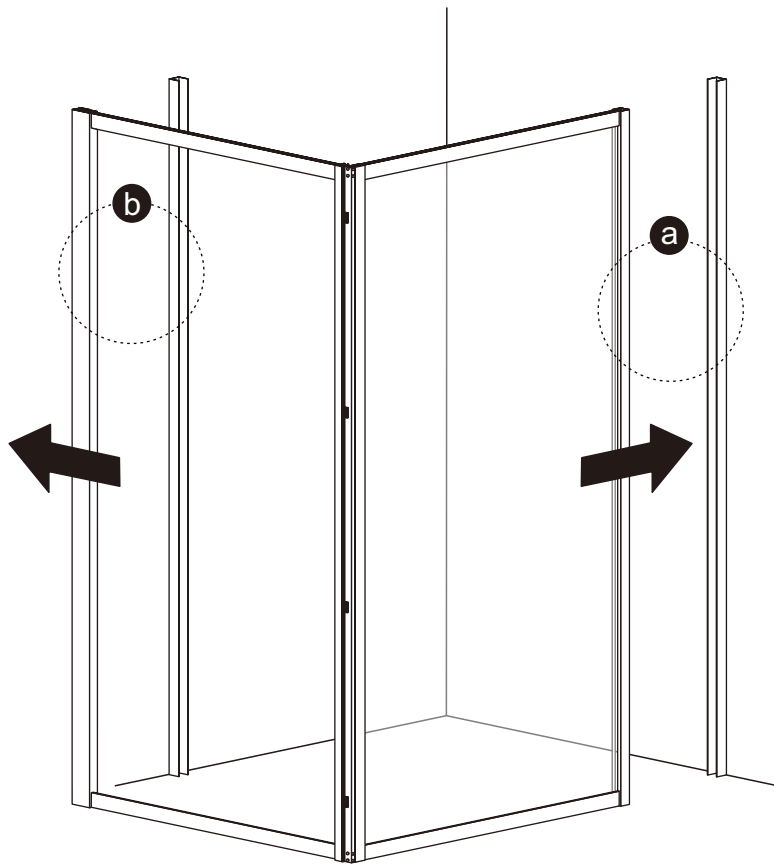

Installation instructions

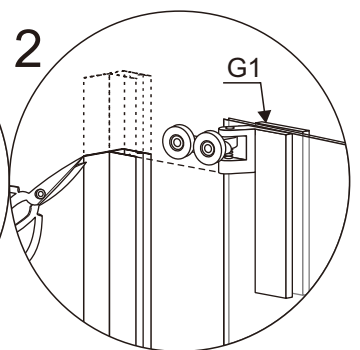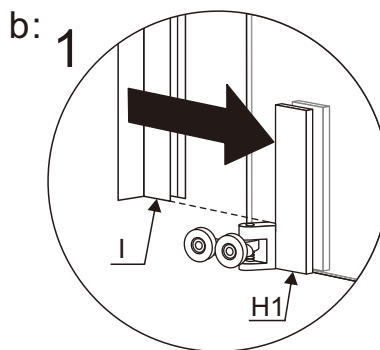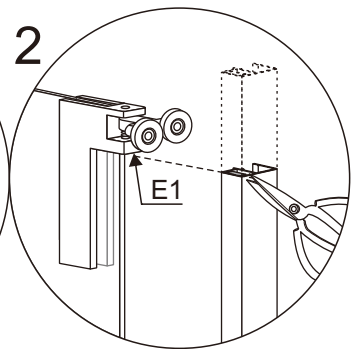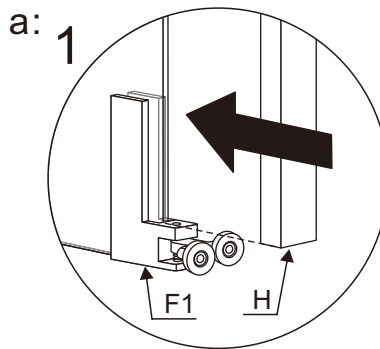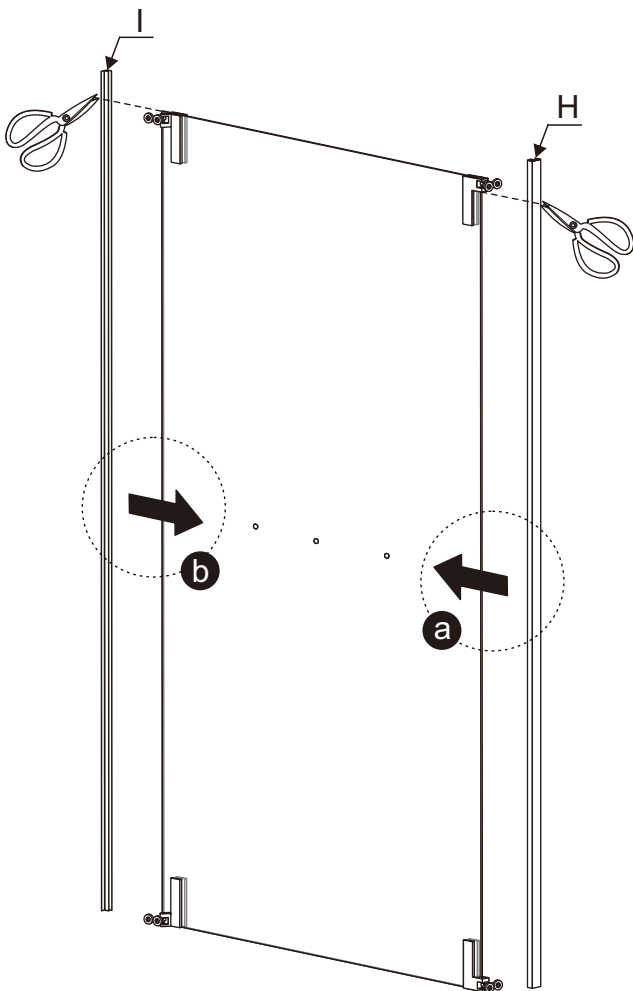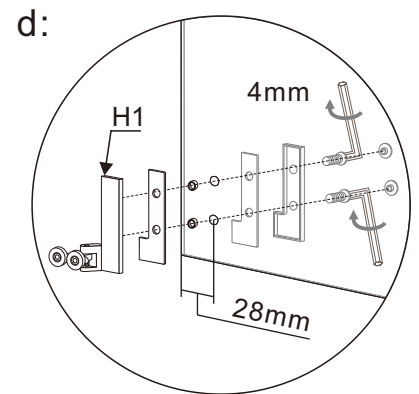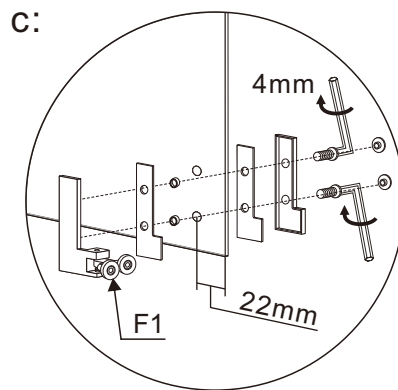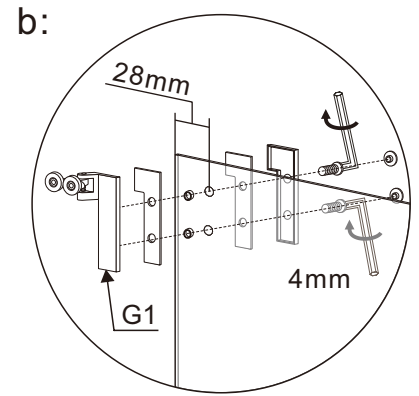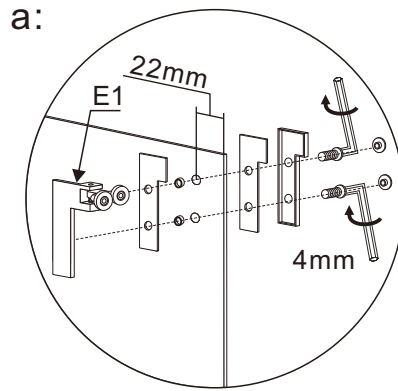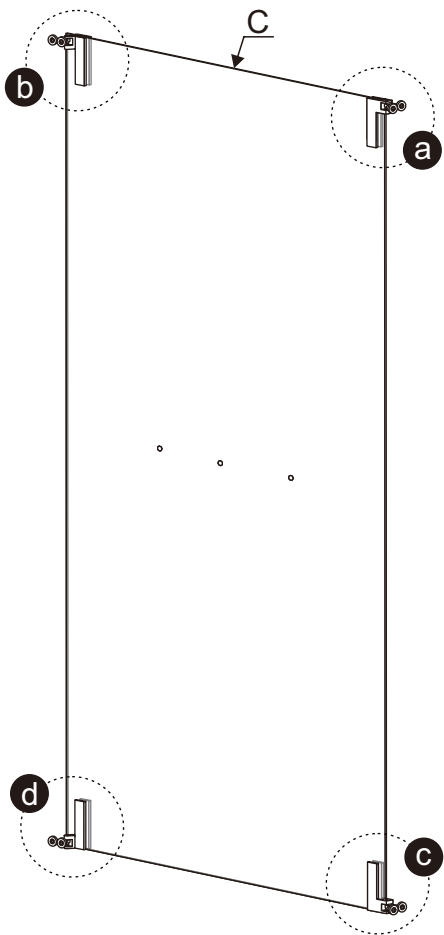

Installation instructions

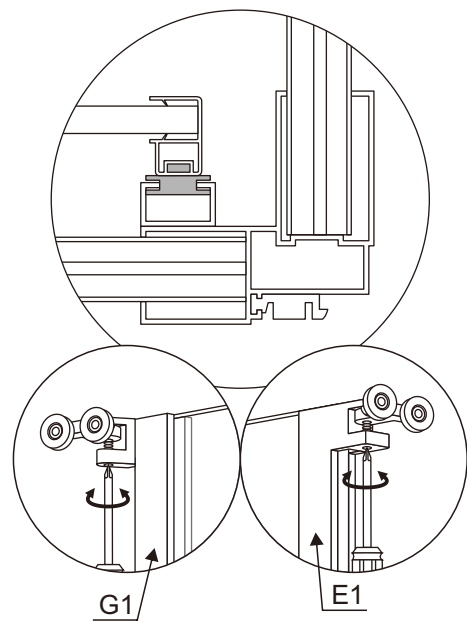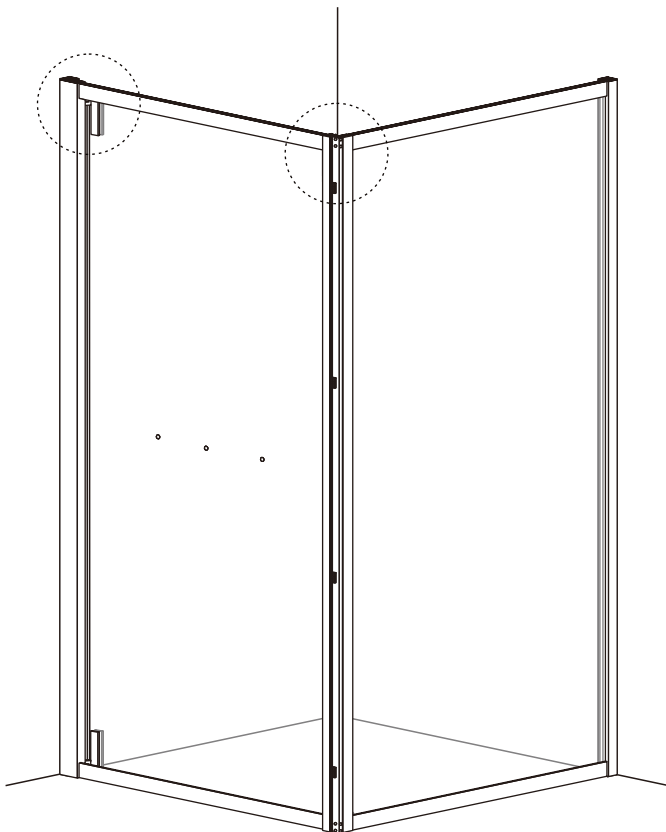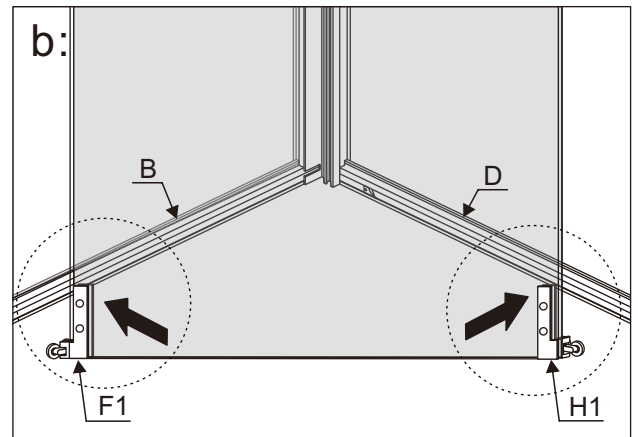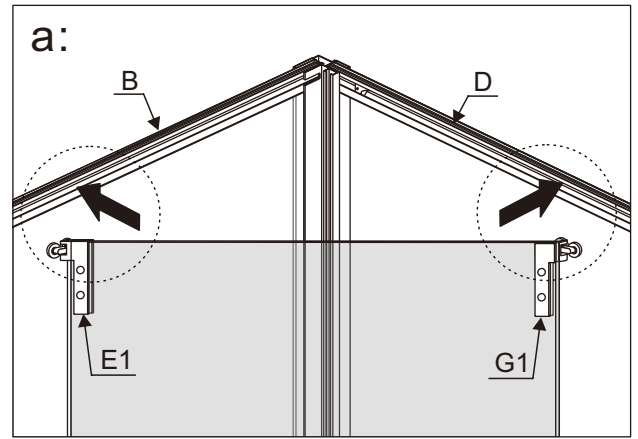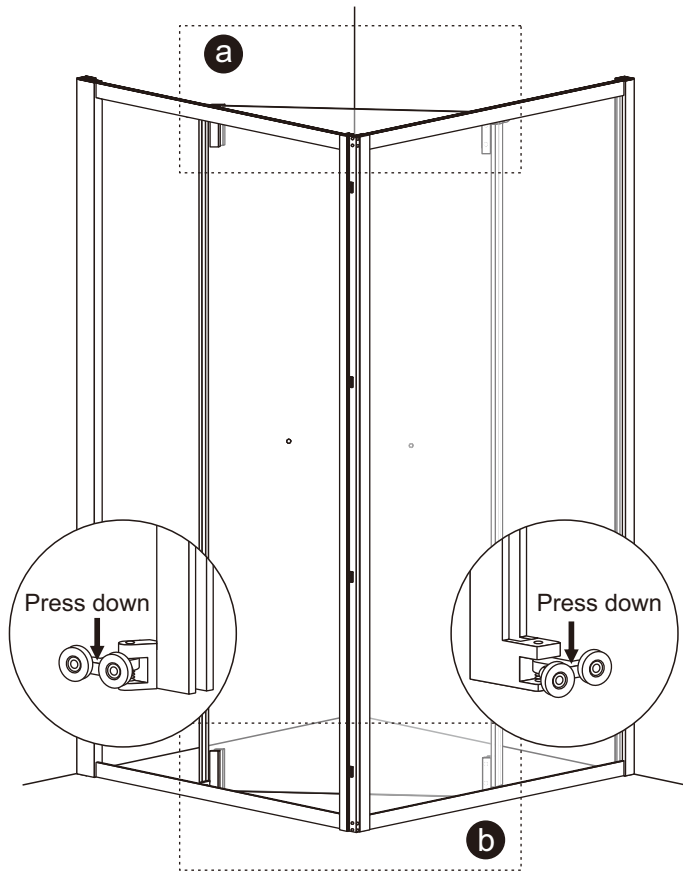

Installation instructions

