


# HS-001 left Installation instructions

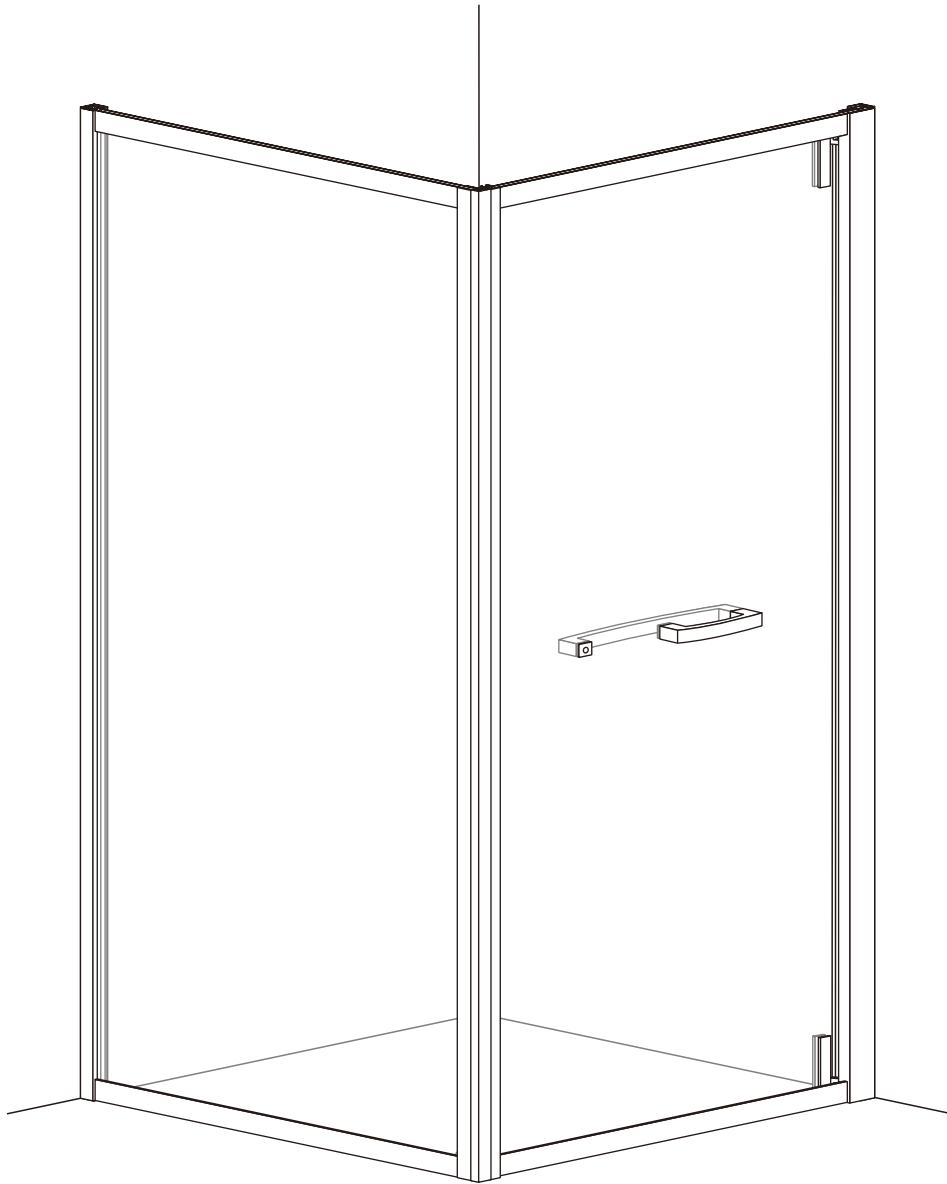


**SIZE:80X80X200CM**  
**90X90X200CM**

# Installation instructions


## TOOLS REQUIRED(NOT SUPPLIED)

when you're ready to start. make sure that you have the following tools to hand, plenty of space and a clean dry area for assembly.


Two people are needed. Please note: Although these instructions are comprehensive, We always recommend that a technically competent installer should undertake installation.

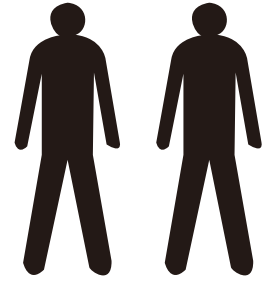


Drill bit to suit wall type  
6mm

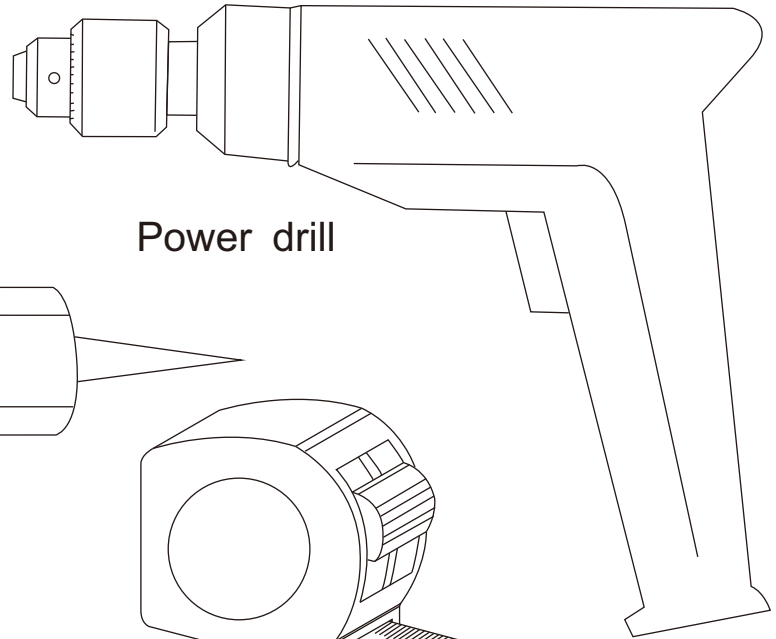


Power drill

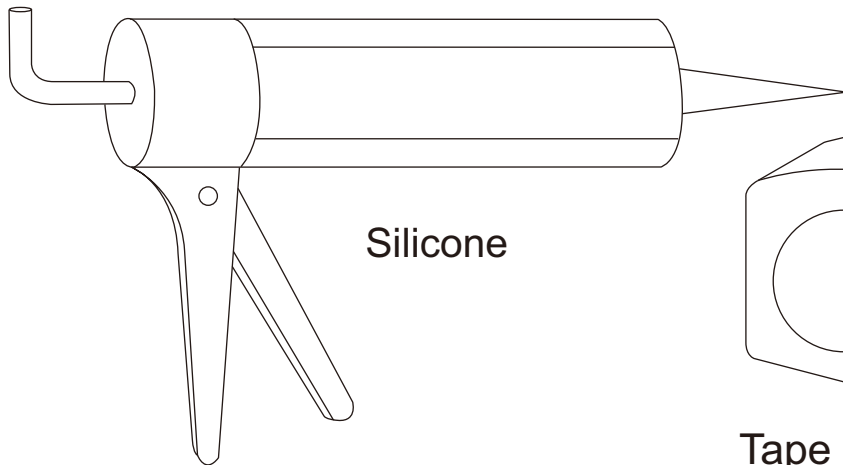


Silicone

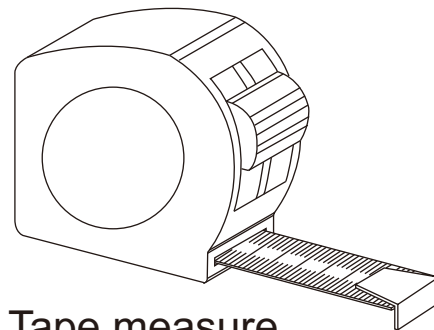


Tape measure

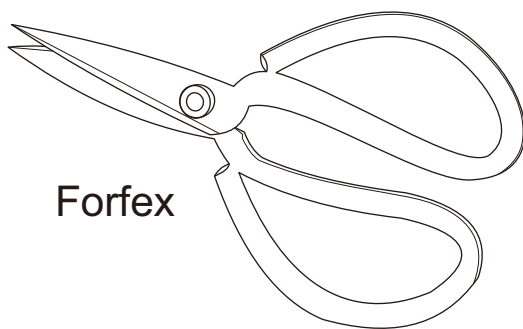


Forfex

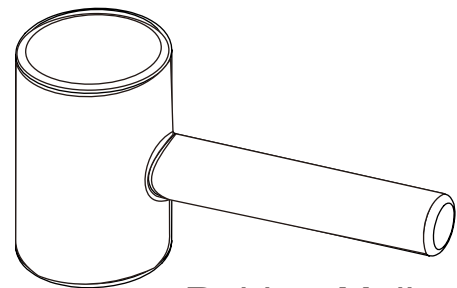


Rubber Mallet



Pencil
















Magnetic cross head screw driver




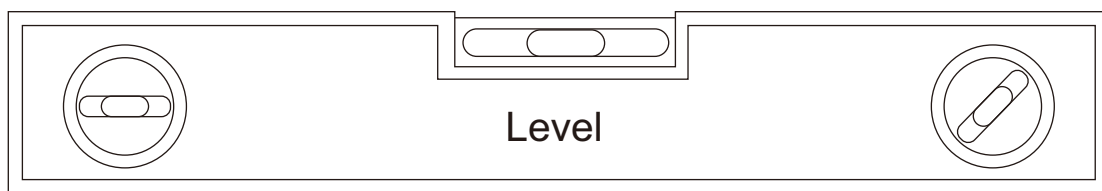


Level







# Installation instructions

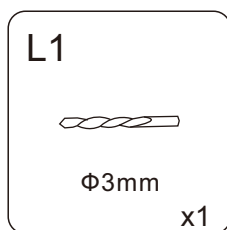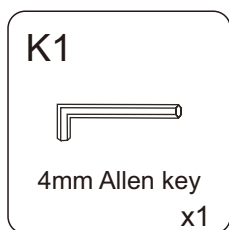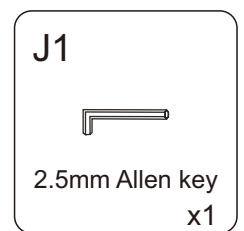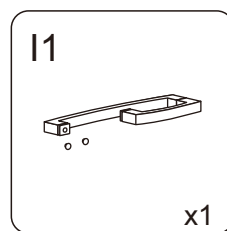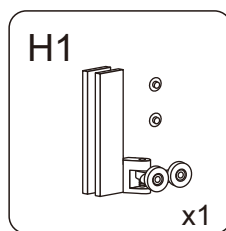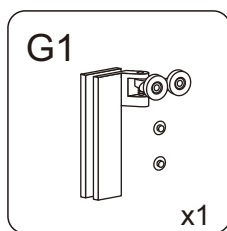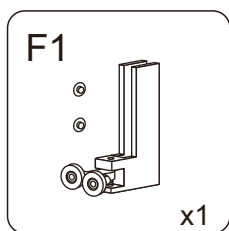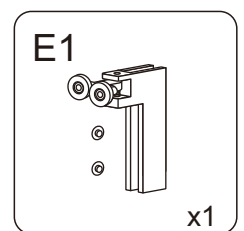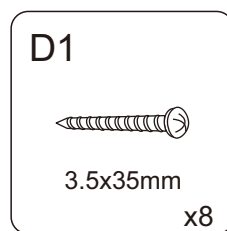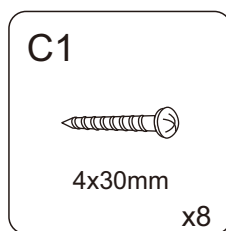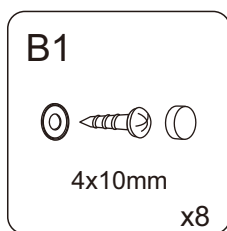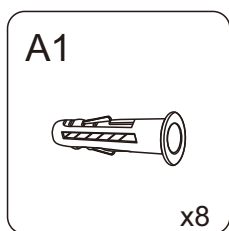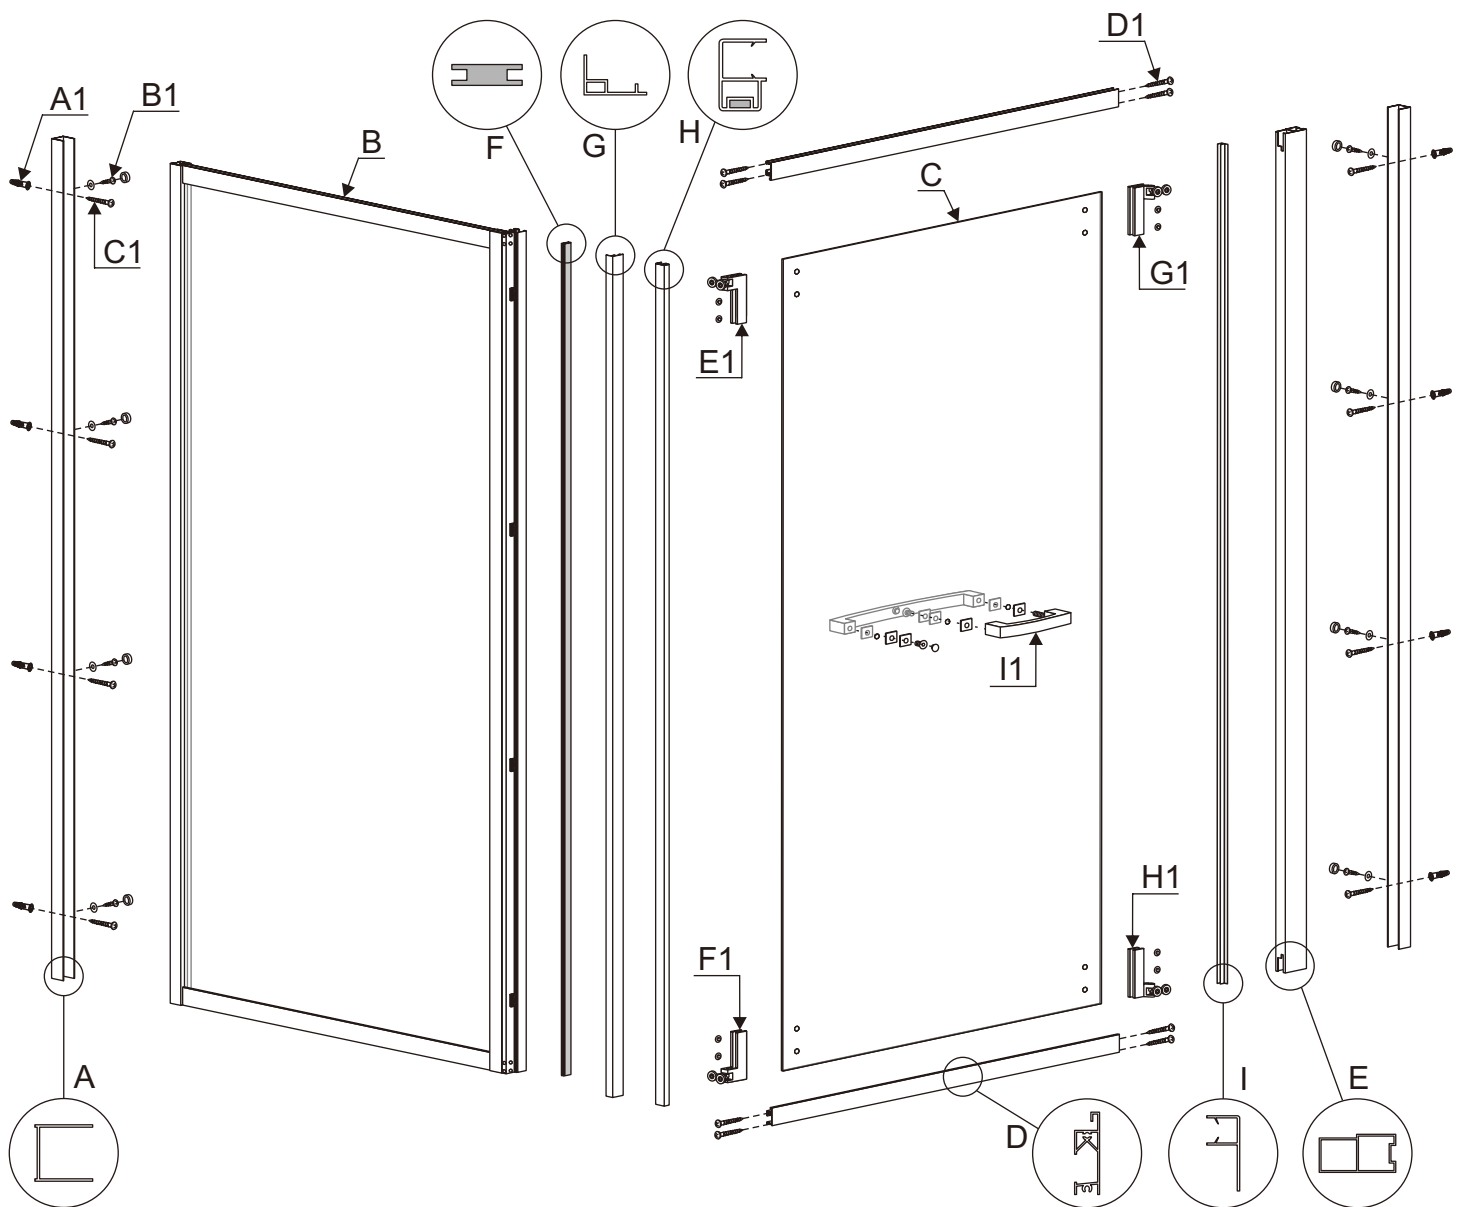











# Installation instructions

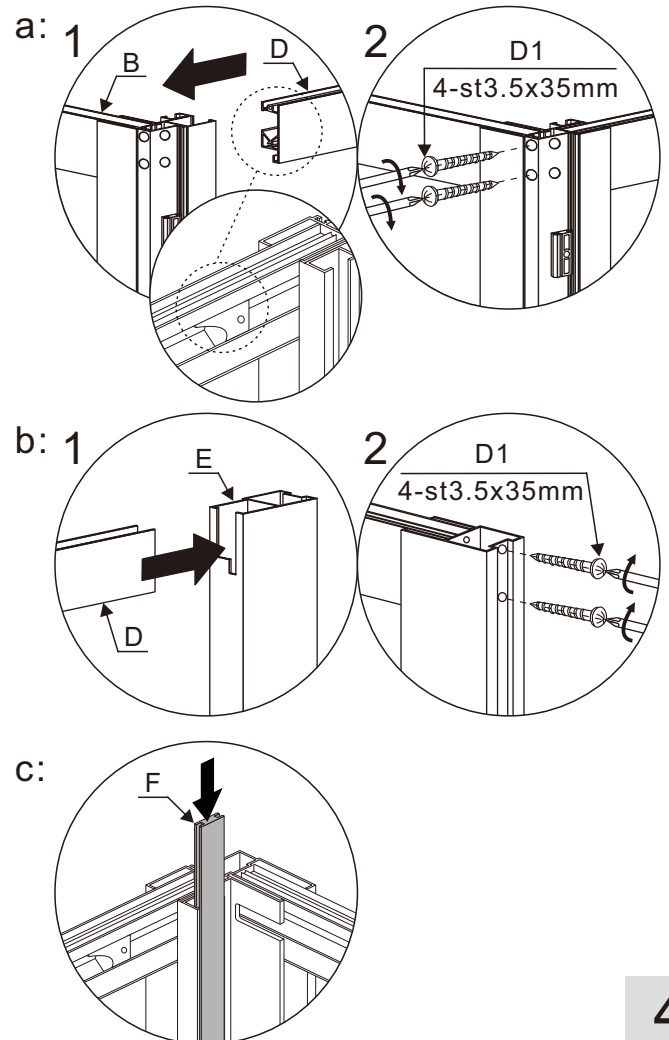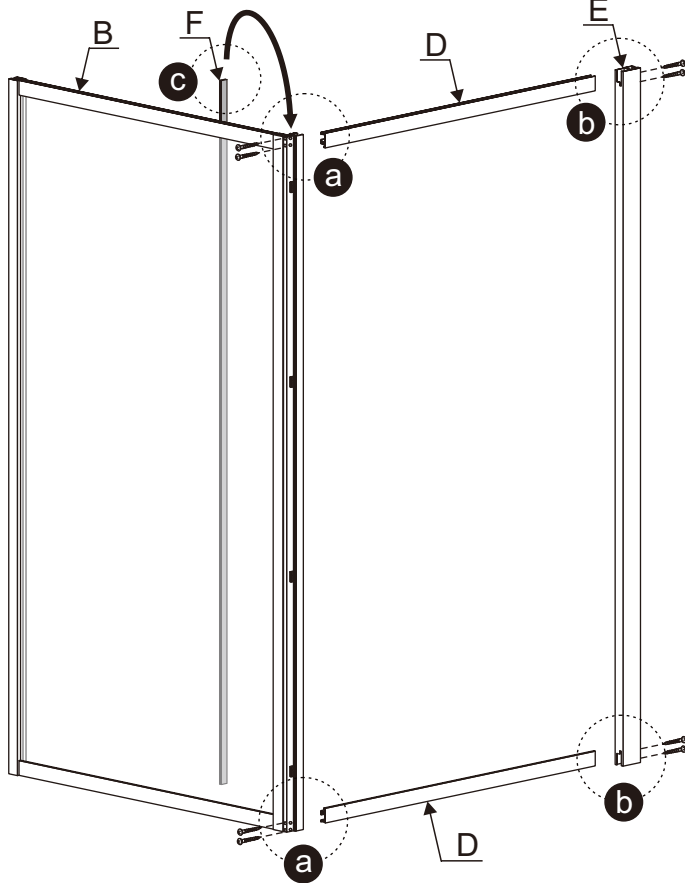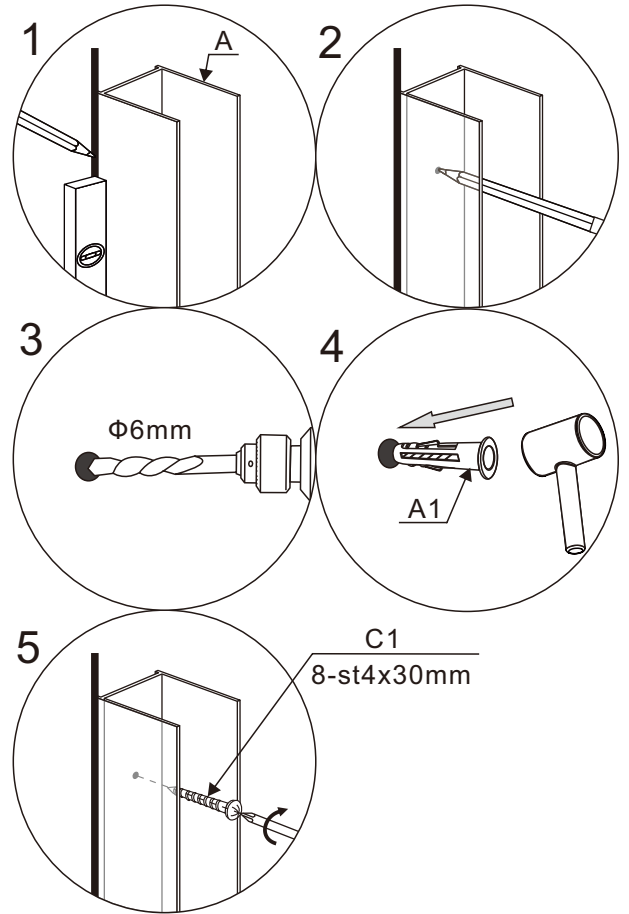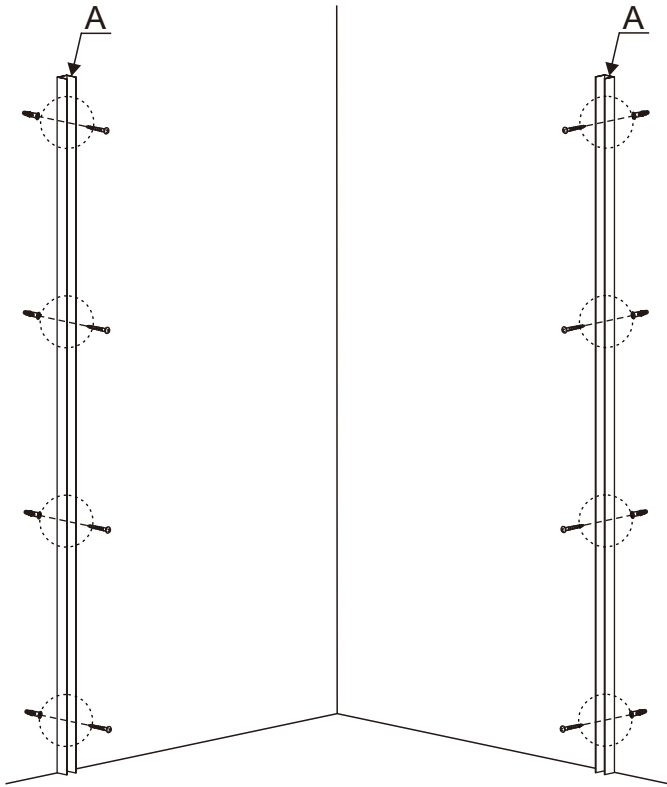






# Installation instructions

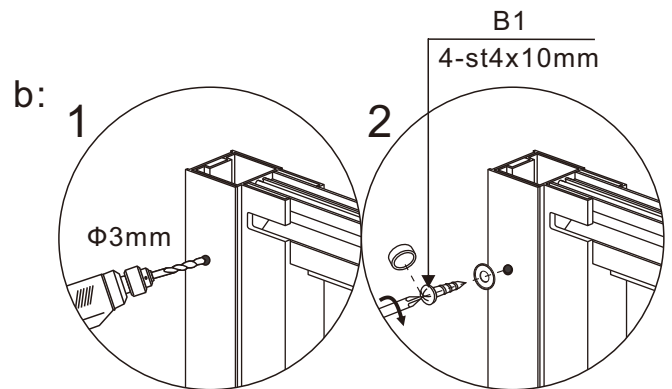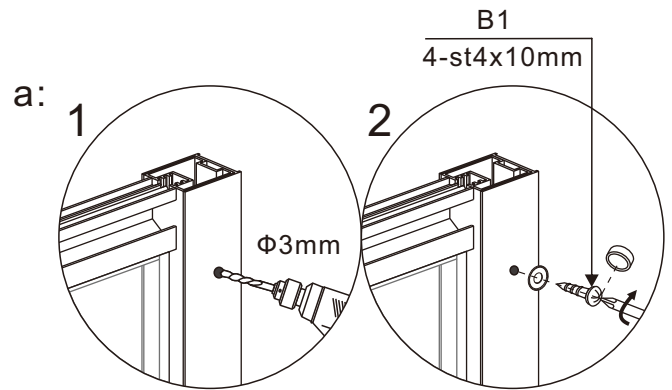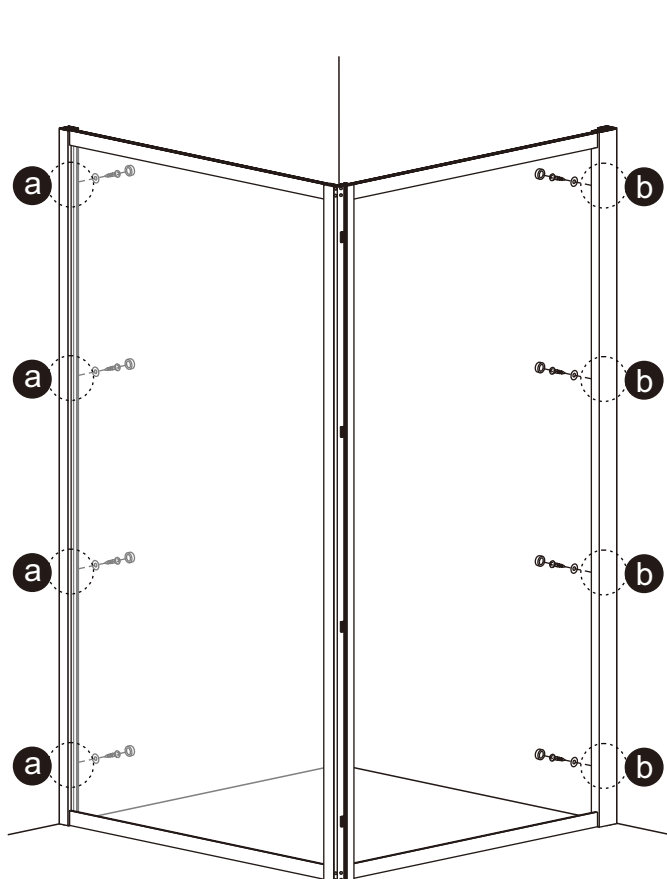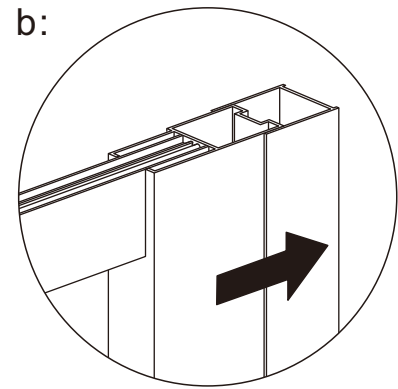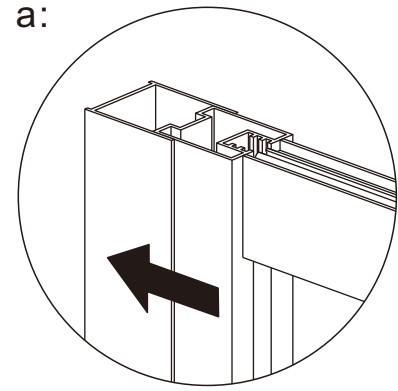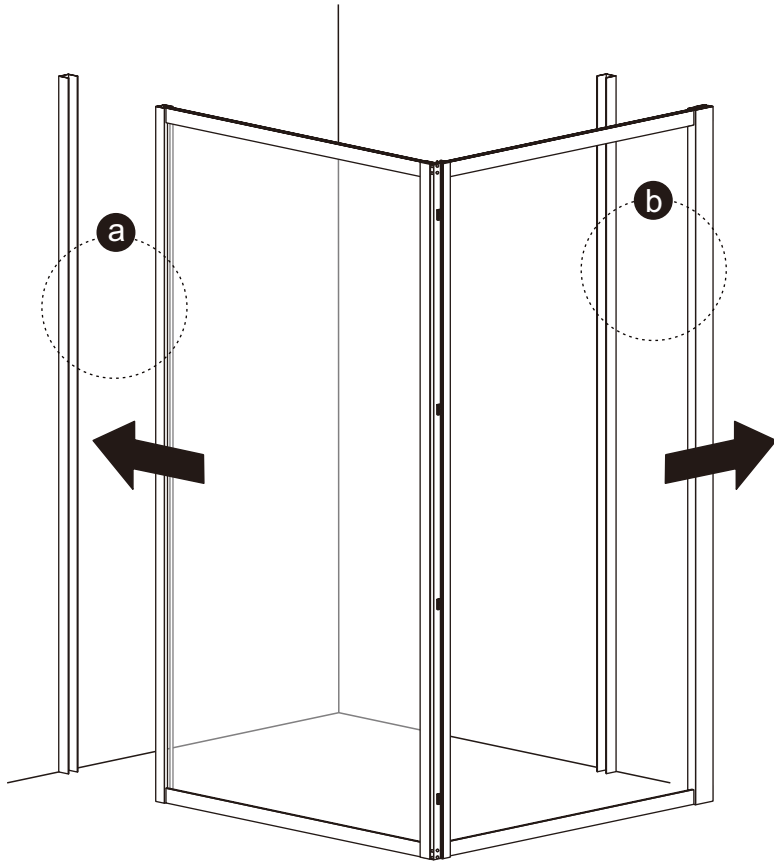

# Installation instructions

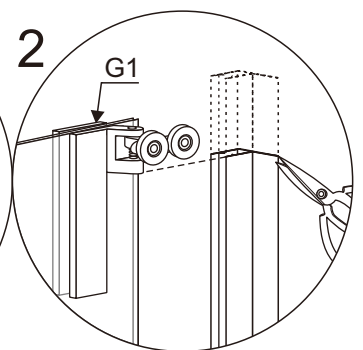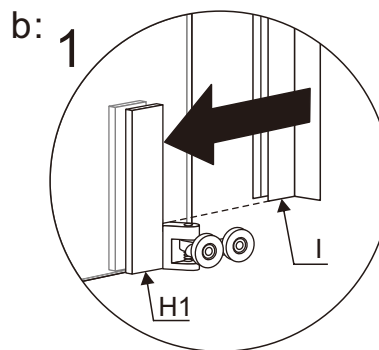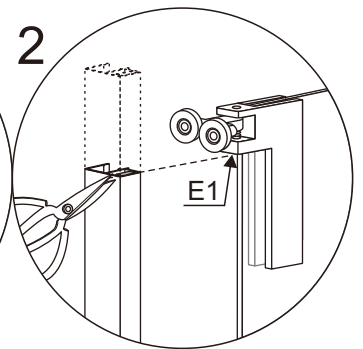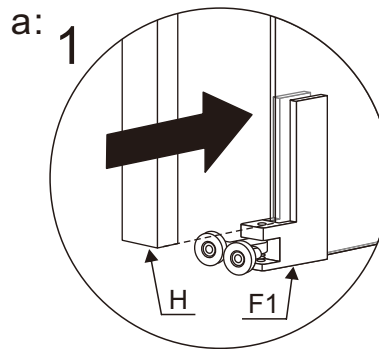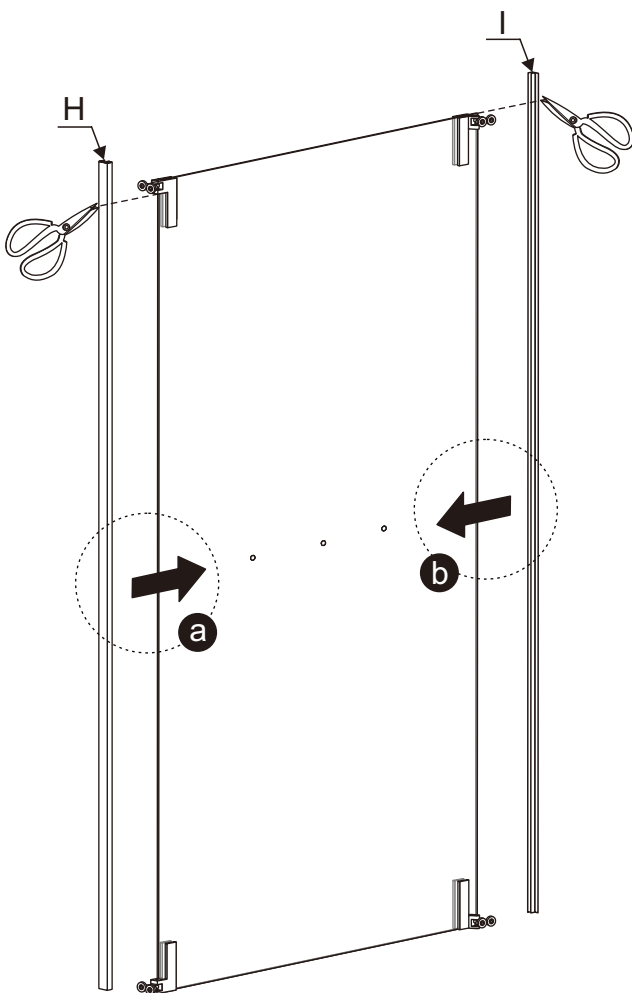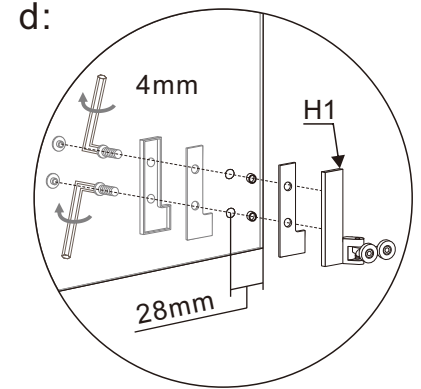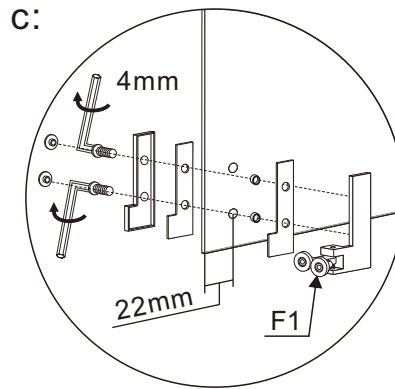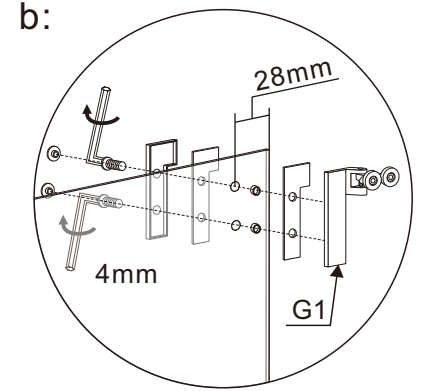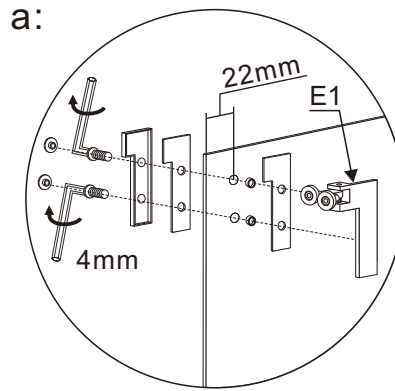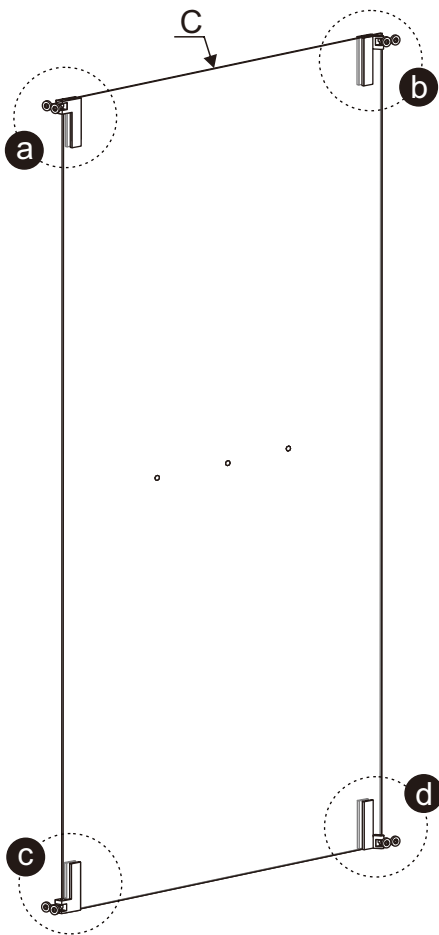

# Installation instructions

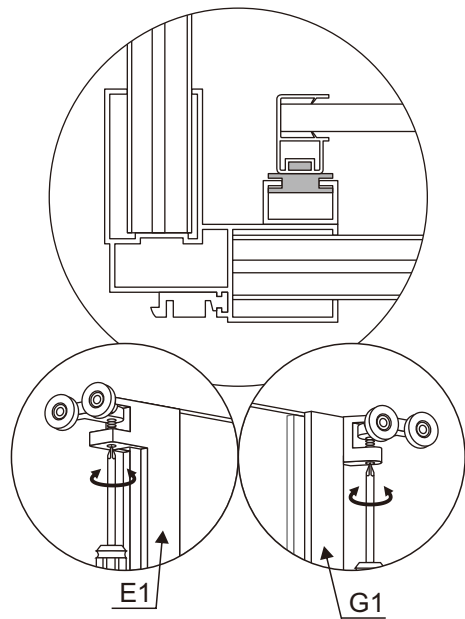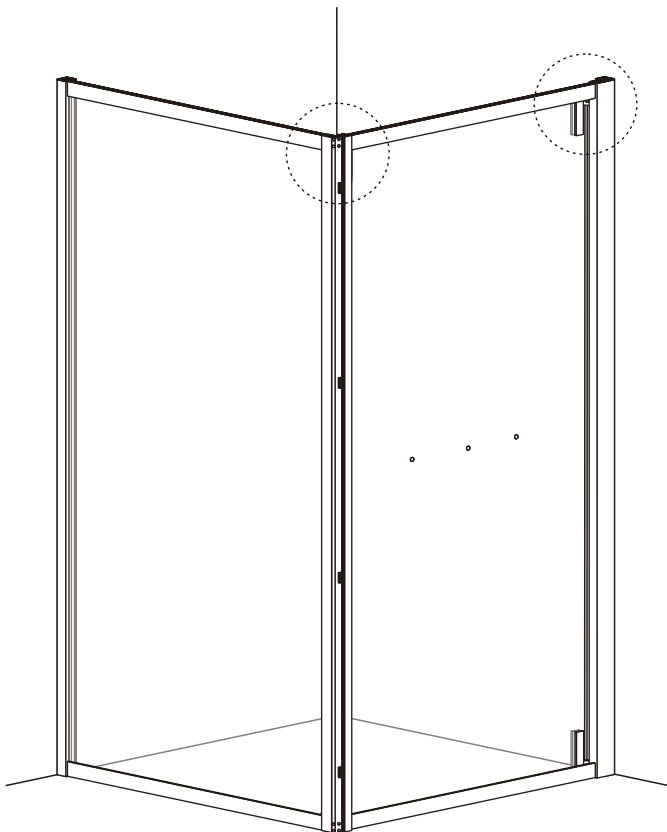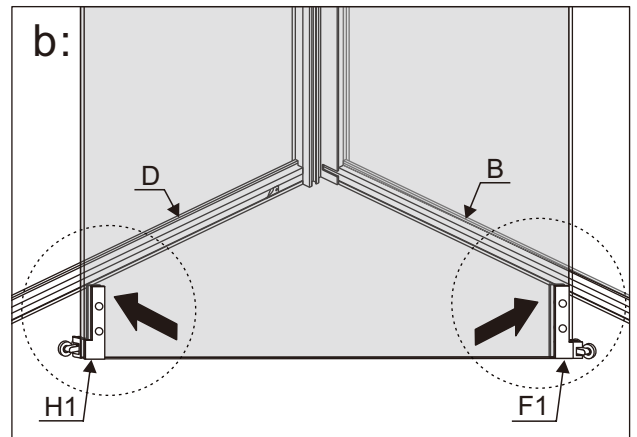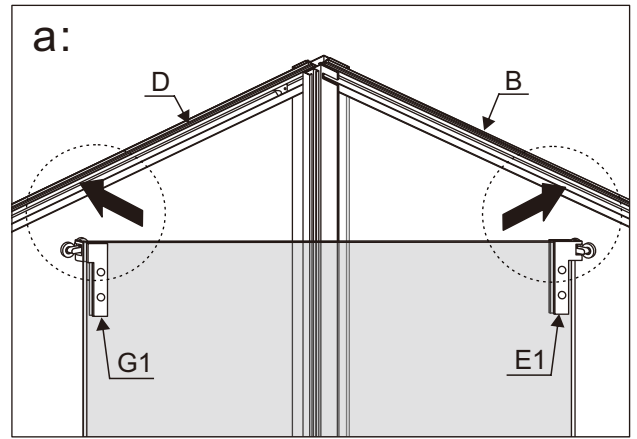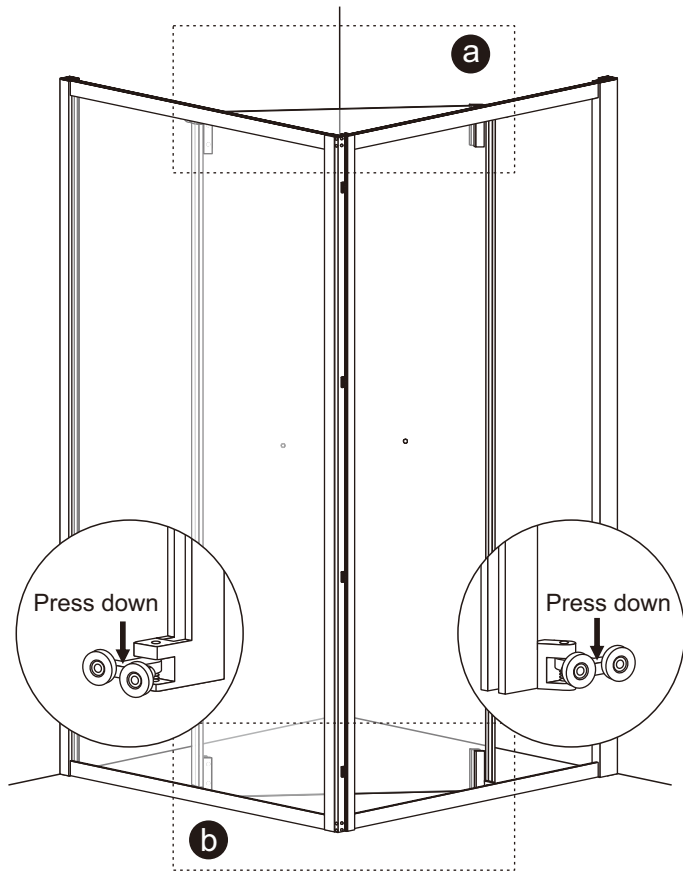

# Installation instructions

