

BR-7002

Installation instructions




Installation instructions


TOOLS REQUIRED(NOT SUPPLIED)

when you're ready to start,make sure that you have the following tools to hand,plenty of space and a clean dry area for assembly.


Two people are needed. Please note:although these instructions are comprehensive,We always recommend that a technically competent installer should undertake installation.

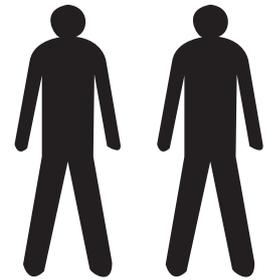


Drill bit to suit wall type
5.5mm

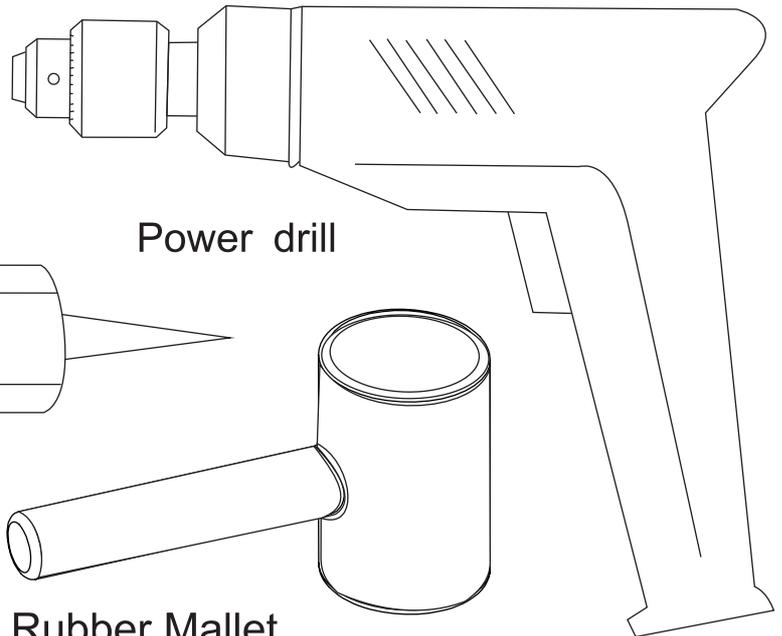


Power drill

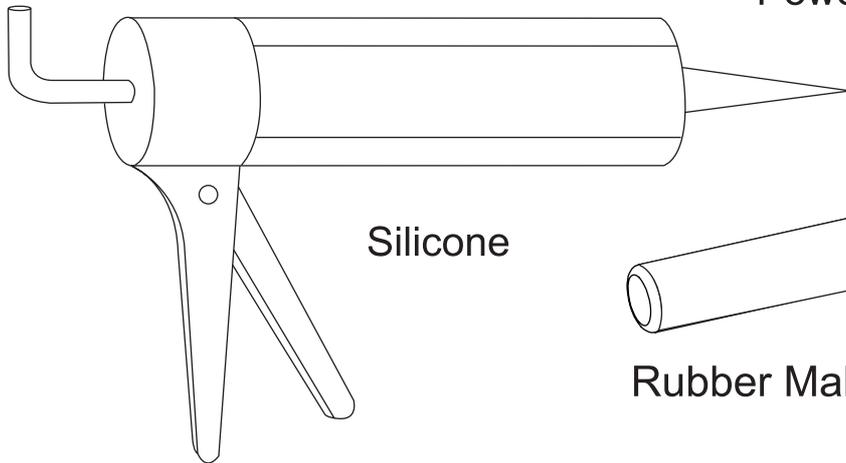


Silicone

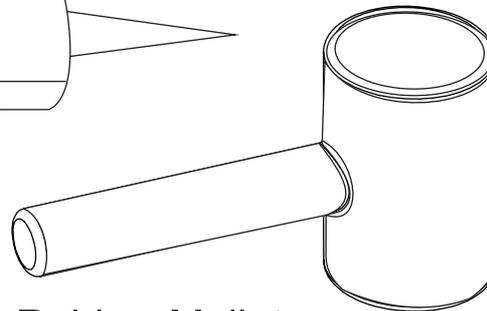


Rubber Mallet

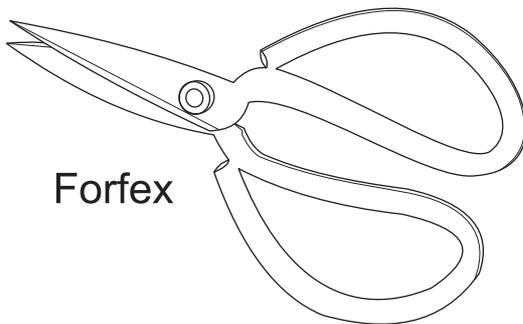


Forfex

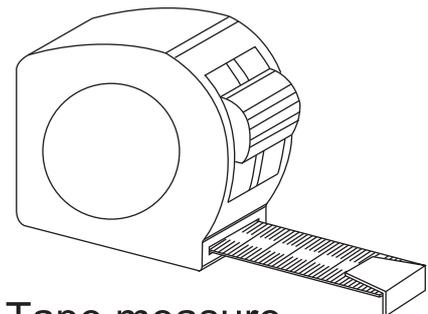


Tape measure



Pencil

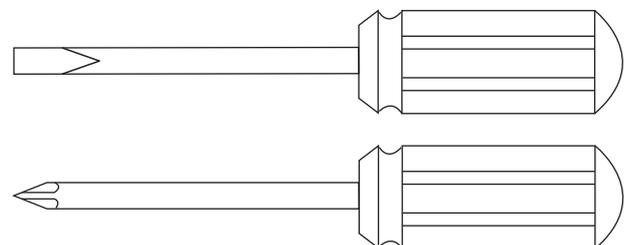


Magnetic cross head screw driver

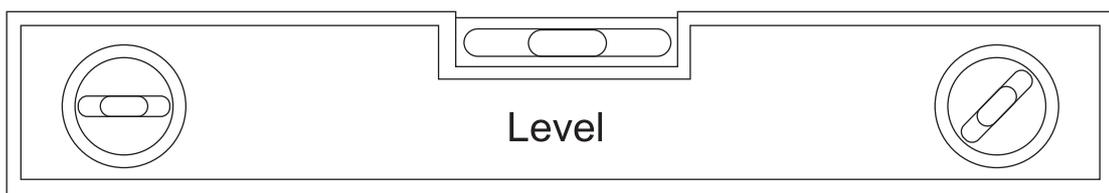

Level

Installation instructions







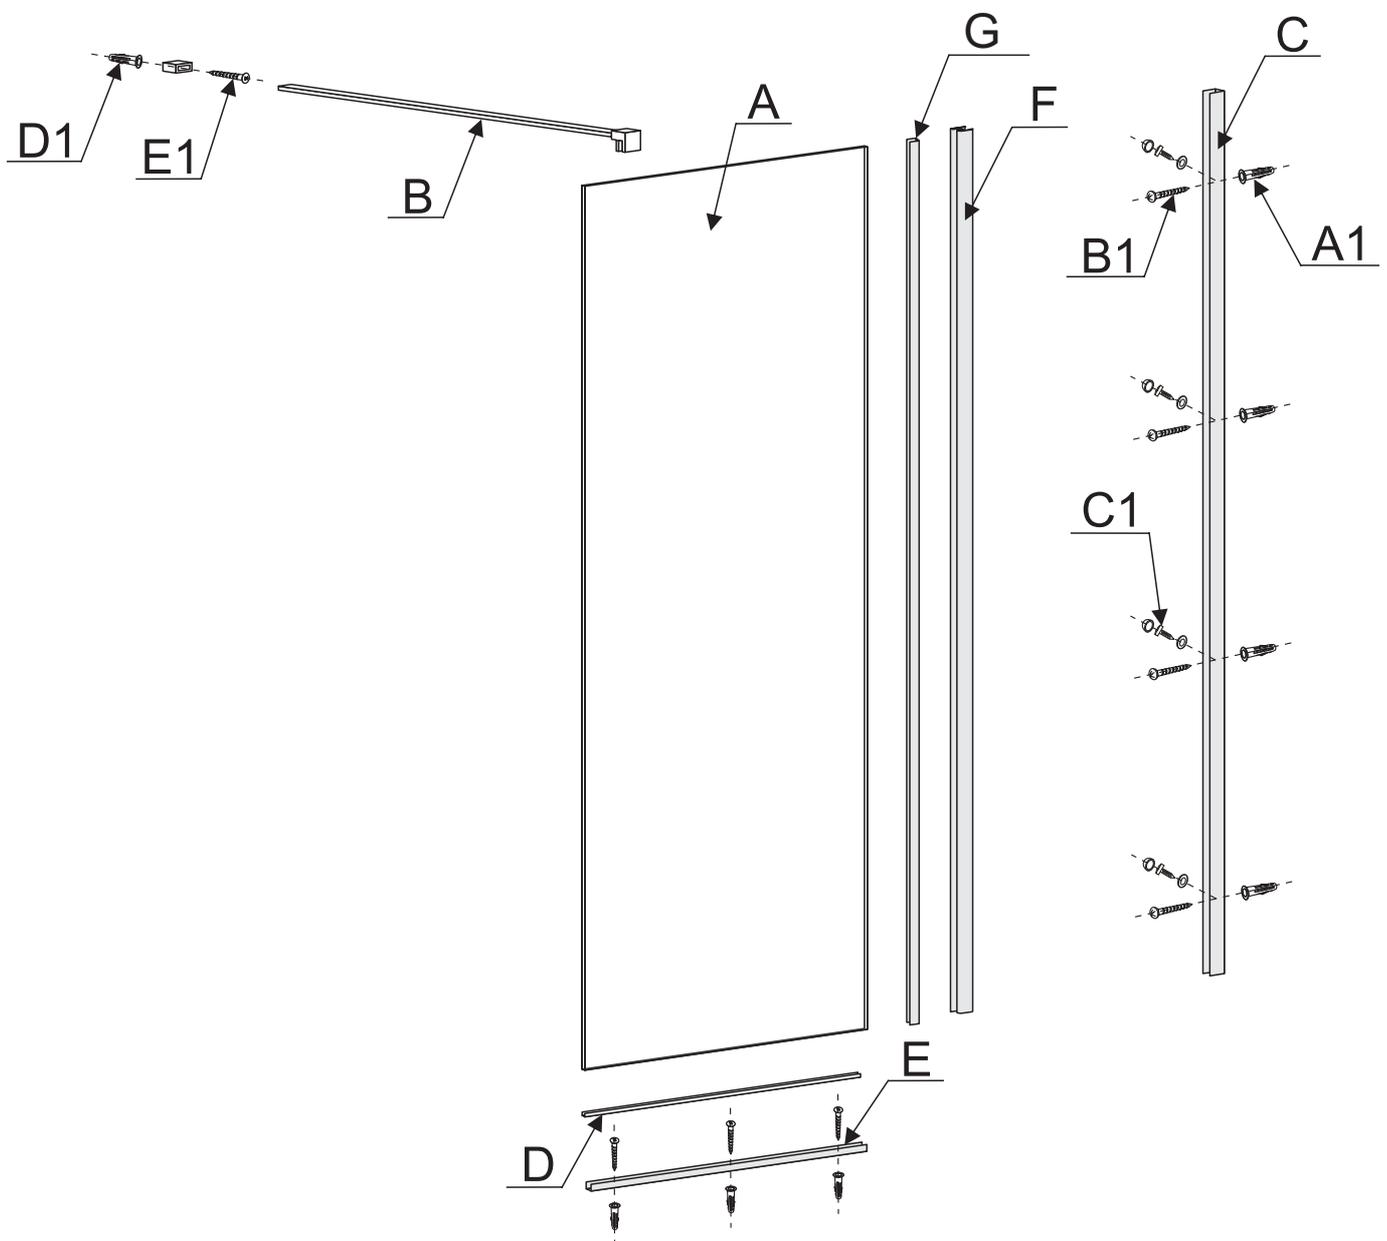


Fixing kit includes



Ref	Description	Qty
A	SHOWER WALL	1
B	SUPPORT BAR	1
C	WALL PROFILE	1
D	RUBBER SEAL	1
E	ALUMINIUM ALLOY	1
F	VERTICAL PROFILE	1
G	RUBBER SEAL	1

Ref	Description	Illustration	Qty
A1	SMALL WALL PLUG		7
B1	FLAT HEAD SCREW: 4x25mm		7
C1	SCREW: 4x10mm		4
D1	BIG WALL PLUG		1
E1	SCREW: 5x45mm		1
F1	HEX KEY 2.5mm		1
G1	DRILL BIT 3mm		1



Installation instructions

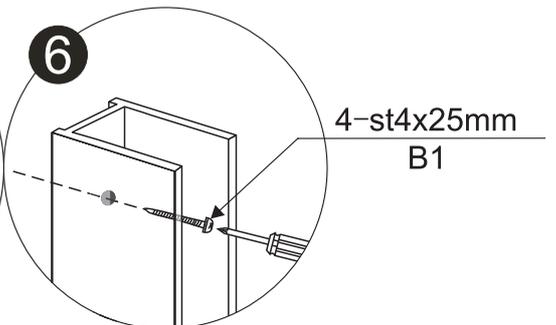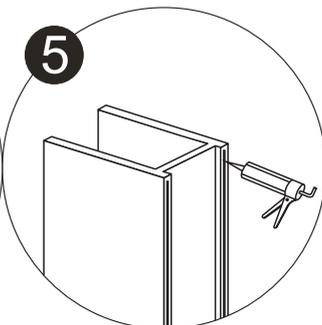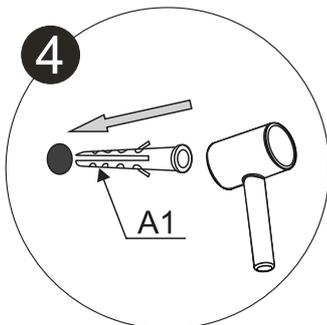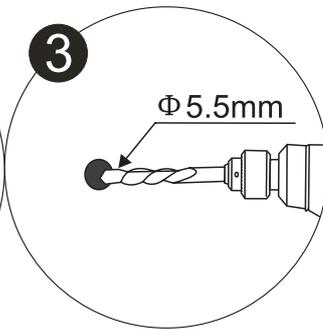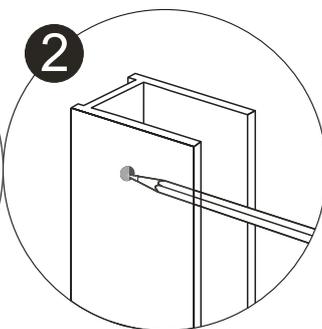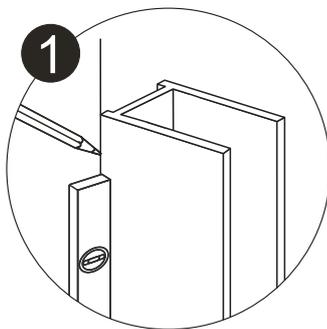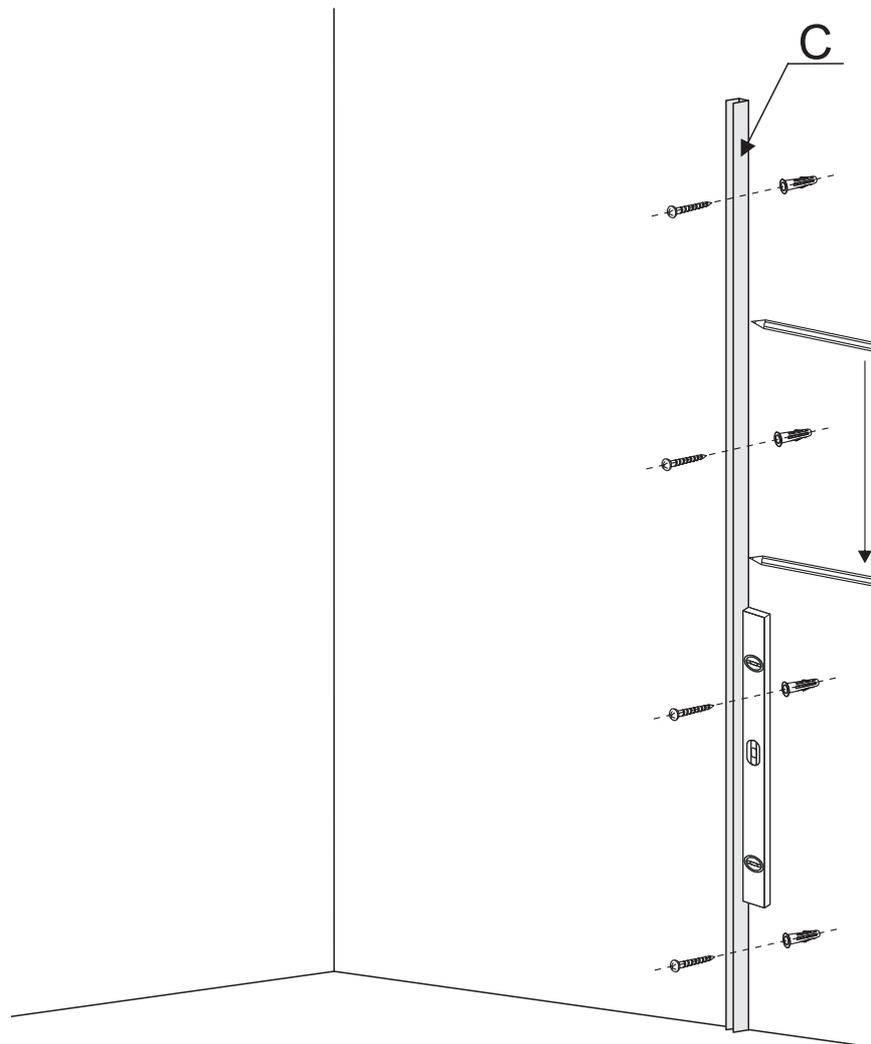



Installation instructions

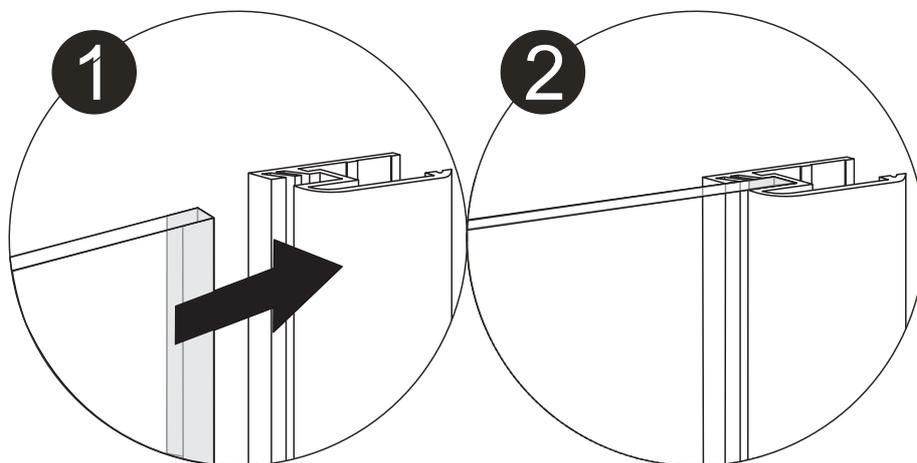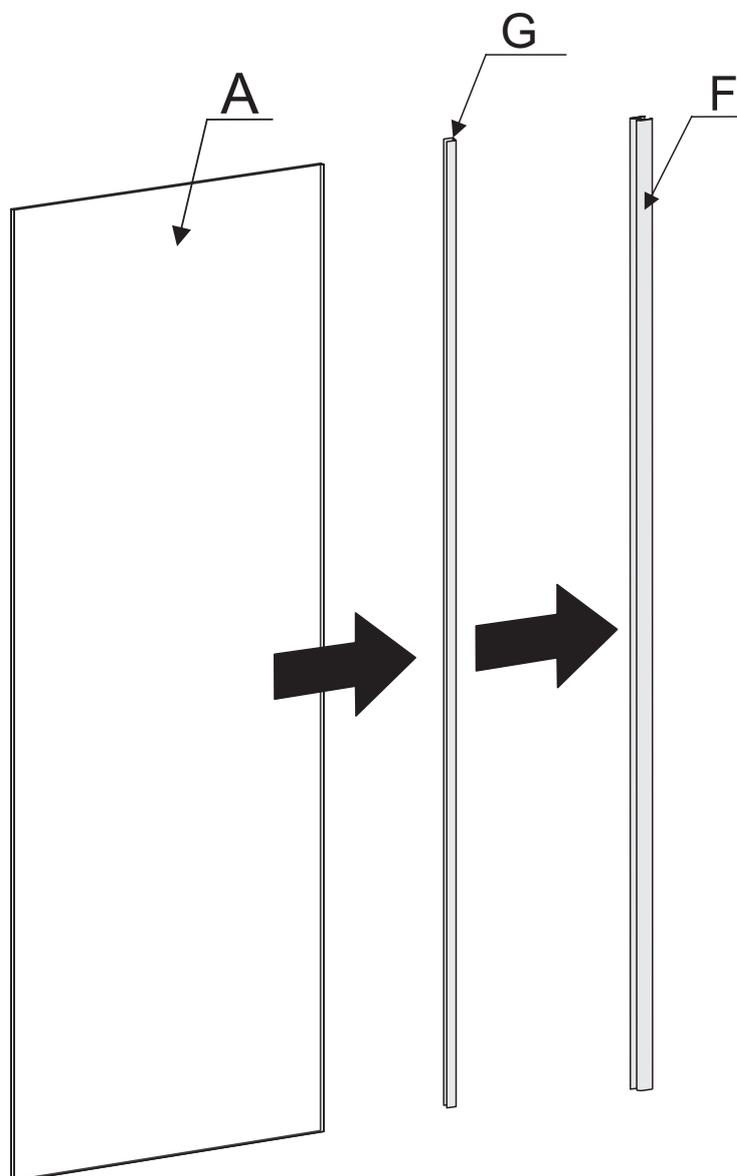



Installation instructions

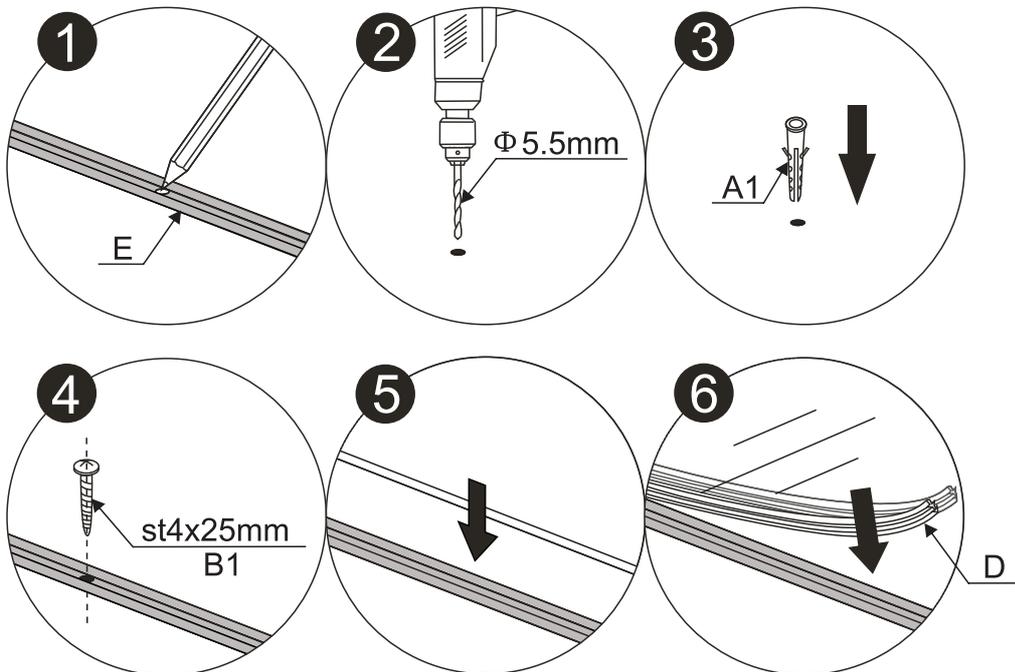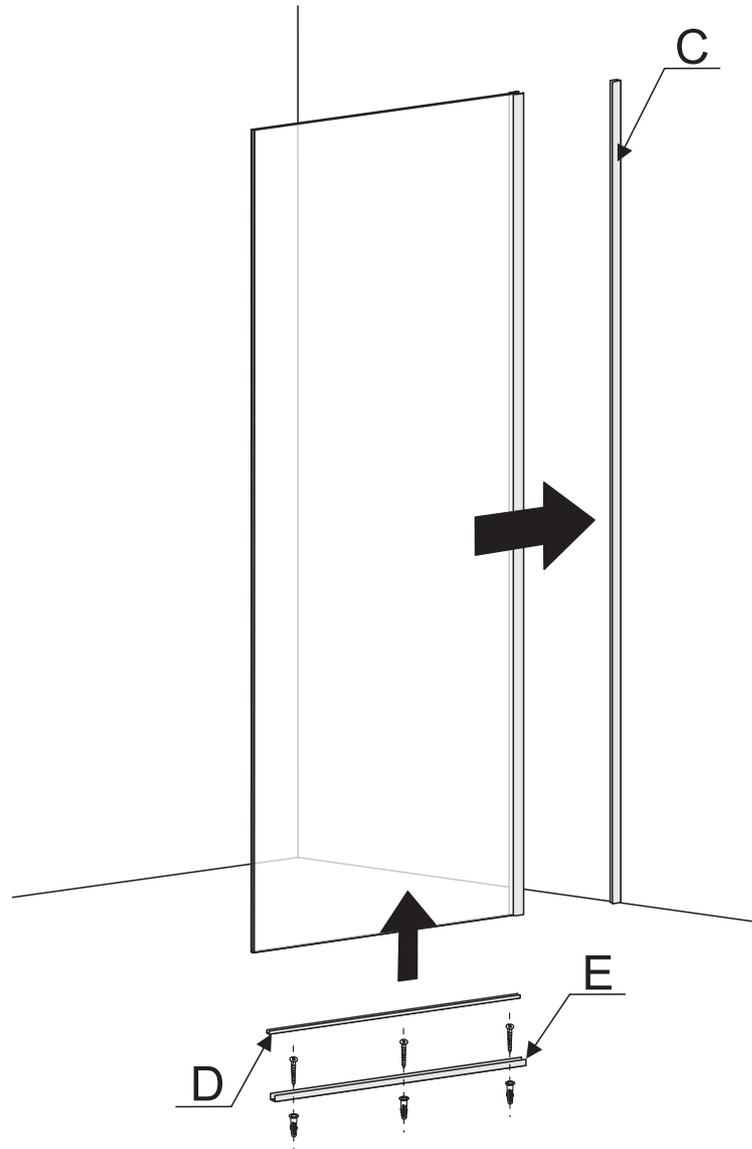

Installation instructions

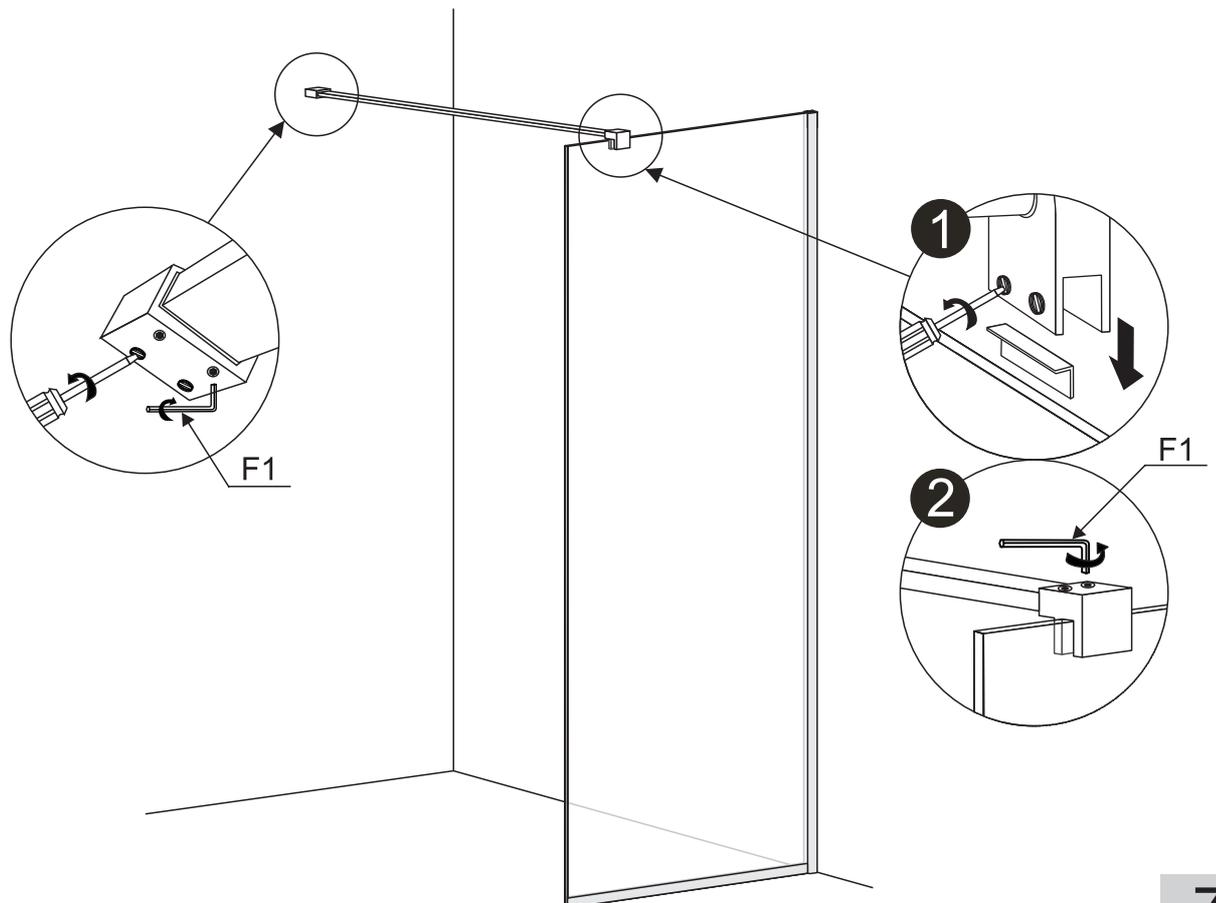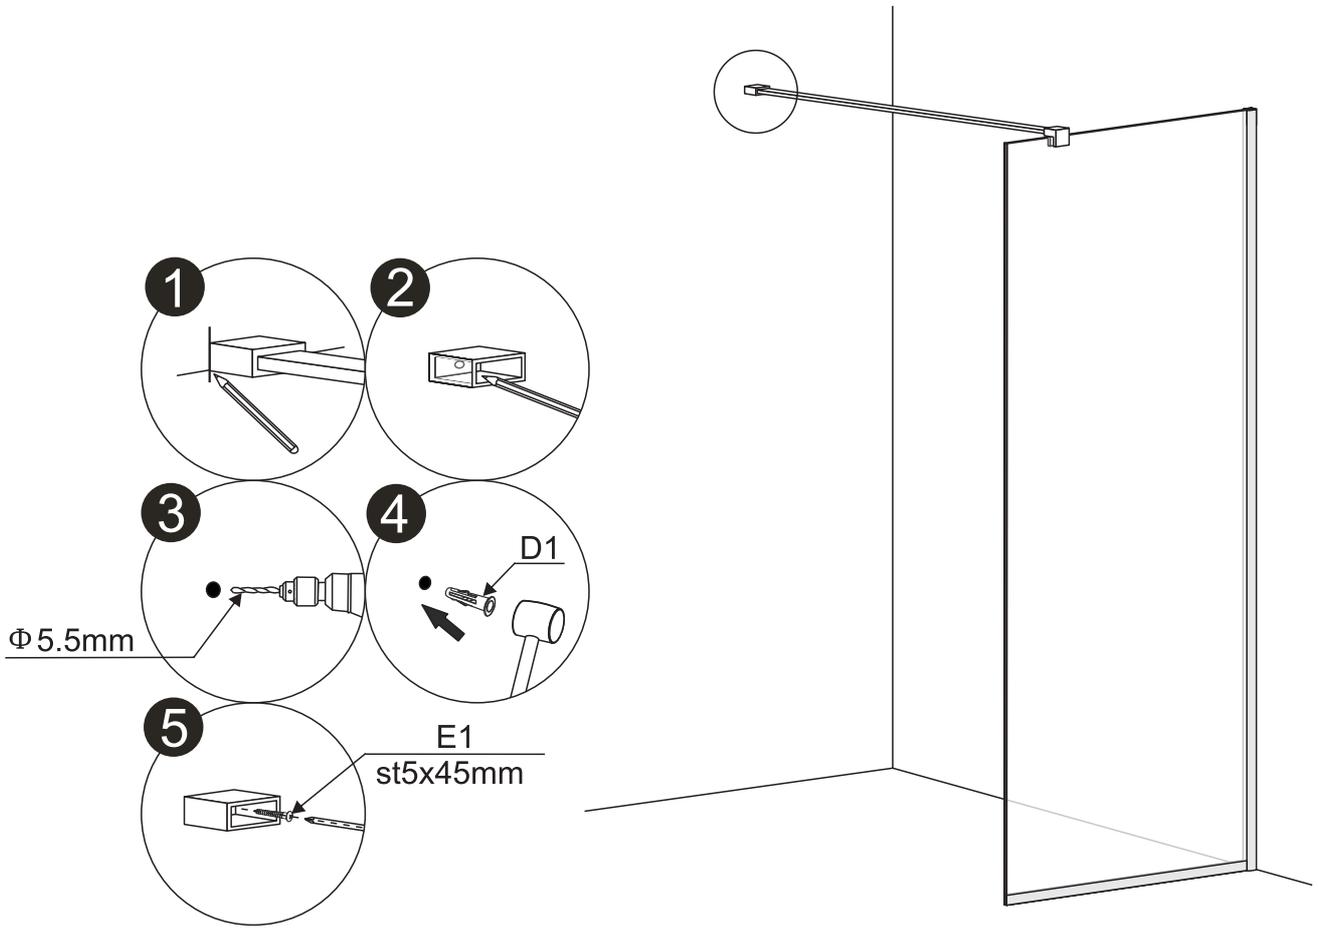

Installation instructions

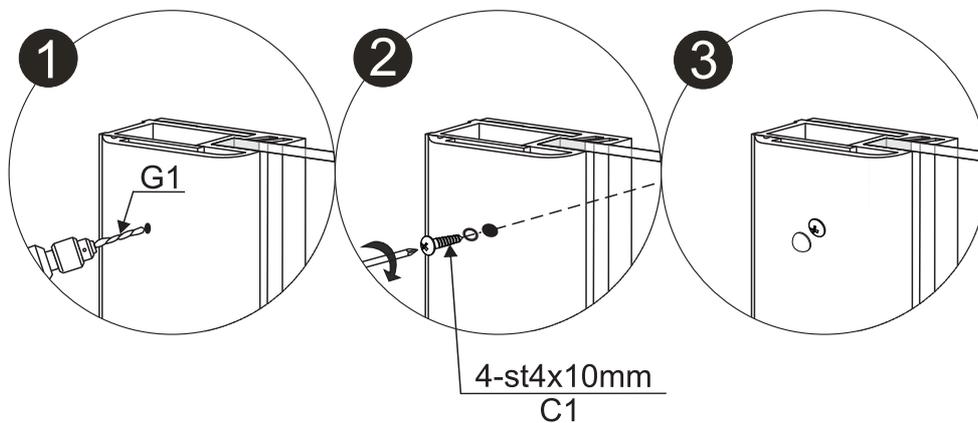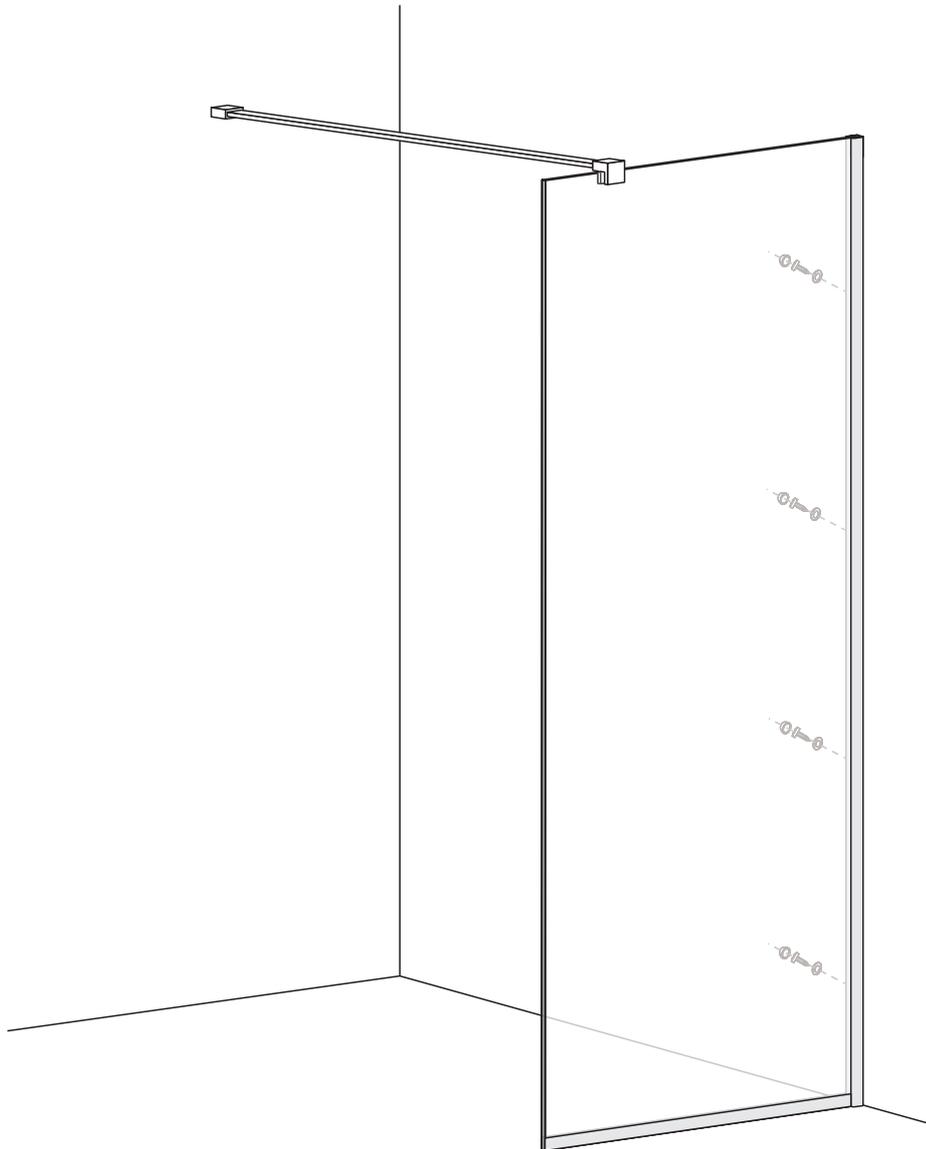

Installation instructions

